

1. BATTERY SWITCH
2. WINDLASS BREAKER (ON BATTERY SW PANEL)
3. NEGATIVE BUS BAR IN BATTERY COMPARTMENT
4. NEGATIVE CABLE TO MOTOR
5. POWER LEAD FROM BREAKER TO SOLENOID BOX
6. 5 AMP IN-LINE FUSE
7. POWER LEADS TO "UP & DOWN" SWITCH
8. WINDLASS SOLENOID BOX
9. WINDLASS LOCATION
10. WINDLASS "UP & DOWN" CONTROLS


NOTE: SEE FOLLOWING PAGE FOR SCHEMATIC AND WIRE SPECS

DRAWING TITLE: [This document contains information for which HUNTER MARINE CORP. has proprietary rights.](#)

OPTIONAL WINDLASS LAYOUT

DRAWING NO. 488063H-2	REVISION NO. None
DESIGNER: ENG	DATE: 03/01/06

HUNTER

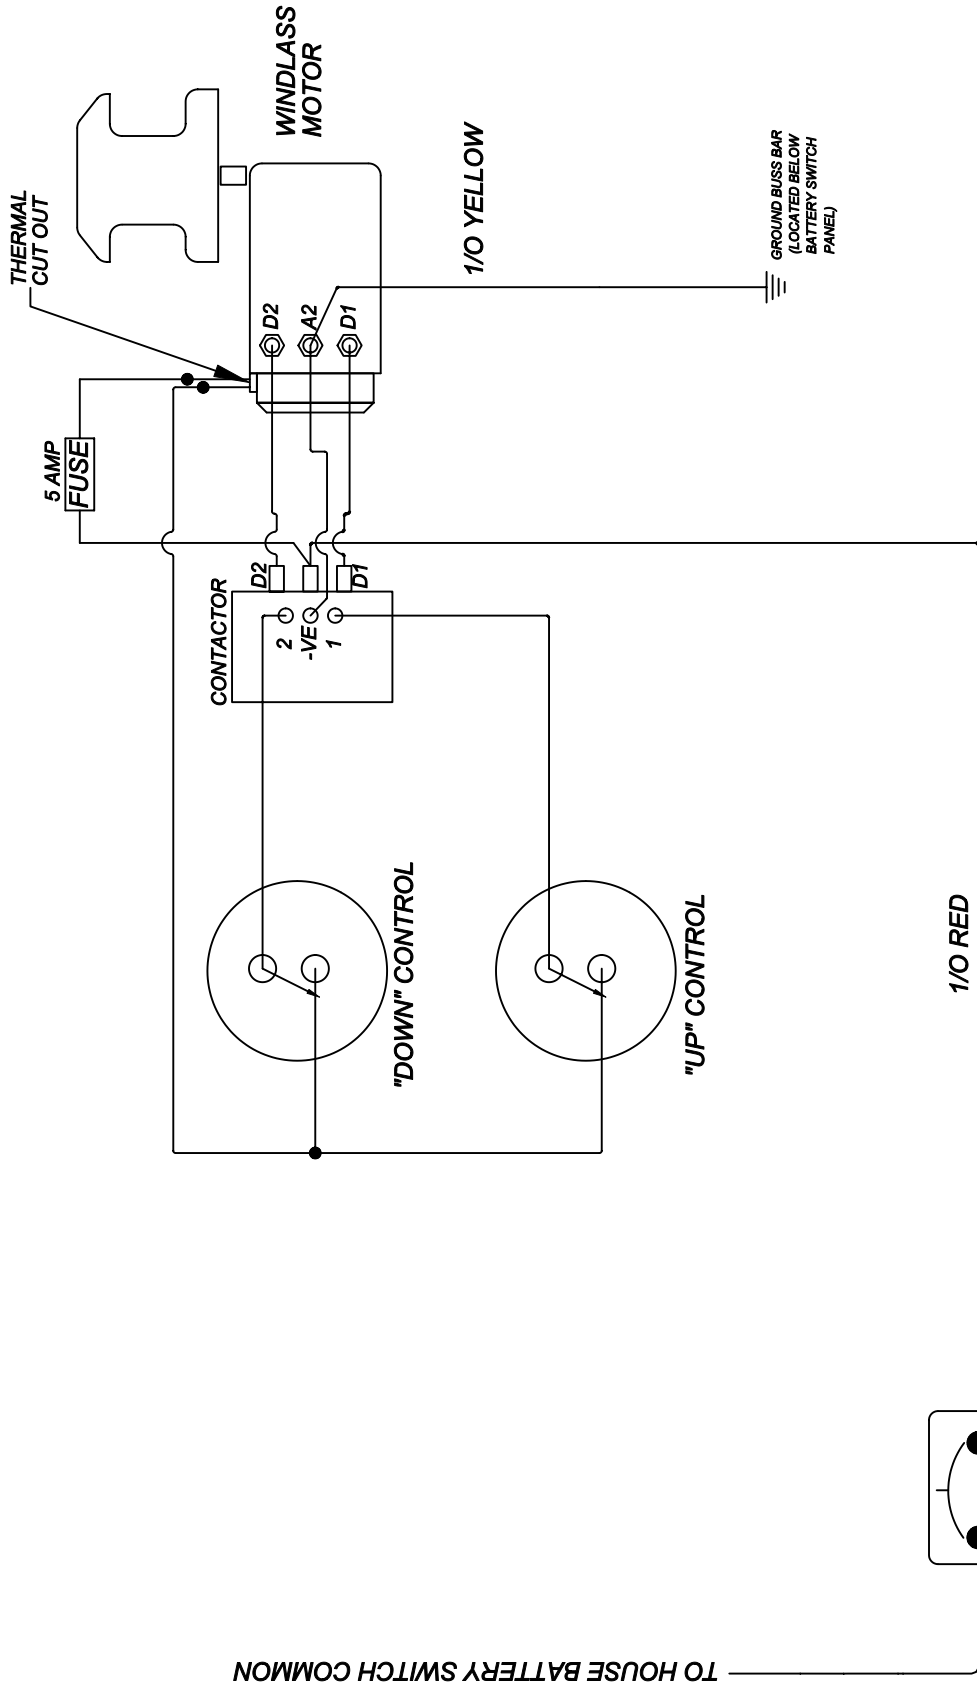

TO HOUSE BATTERY SWITCH COMMON

This document discloses information for which HUNTER MARINE CORP. has proprietary rights.

HUNTER

WINDLASS WIRING SCHEMATIC

DRAWING TITLE	WINDLASS WIRING SCHEMATIC
DRAWING NO.	488064H-3
DESIGNER	ENG
DATE	03/07/06
REVISION NO.	NONE