



Periodic adjustment of the dog might be necessary to maintain proper pressure. This is accomplished by turning the set screw at the tip of the dog clockwise while the dog is disengaged. Turn the set screw half a turn and check for proper compression of the gasket. Do not over tighten.