

Normally, no adjustment of the dog is required.

To adjust the hatch dog:

1. Open the hatch 90 degrees to prevent the washers from falling out.
2. Remove the screw cover with a flat edge tool.
3. Unscrew the Philips head screw holding the dog to the outer cap.
4. Remove only one washer and reassemble .
Be certain that the O-ring in the outer cap is still in position and in good condition.

