## H41 TO REMOVE BOSE FROM MAIN BULKHEAD

- Page 2 Picture of Bose unit in main bulkhead
- Page 3 Look under shelf unit sits on and if there are any screws remove them.
- Page 4 Open hanging locker door in stb. v-berth hanging locker and remove screws holding access panel in place, this will give you access to wires on backside of bose unit.
- Page 5 Remove cedar panel on aft wall of hanging locker to gain access to the screws that are holding strap that goes over the top of the bose unit in place.
- Page 6 Remove the two screws securing the hold down strap. You should now be able to remove the bose from the bulkhead. If the unit will not slide out from the front you may have to remove it from the backside.









