

Tachometer Seaward
Part # 1852F

Oil Pressure
Guage Seaward
Part # 1855.1F

Water Temperature
Guage Seaward
Part # 1851.F

Ignition Switch
Seaward Part # SW145

Alarm Seaward Part
E106

Rubber Boot Seaward
Part # SW138

Black Boot Push
Start Seaward
Part #SW137

