

1. BOW THRUSTER REMOTE CONTROL LOCATION (ON COCKPIT CONSOLE)
2. REMOTE WIRE RUNS (THRU HEADLINER) 4 WIRES
3. GROUNDING STUD LOCATION (BEHIND NAVIGATION STATION)
4. BOW THRUSTER SWITCH PANEL
5. 250 AMP FUSE
6. BOW THRUSTER
7. BOW THURSTER MOTOR CABLES
8. TO HOUSE BATTERIES

**IMPORTANT NOTES:**

1. SEE PAGE 63J FOR MORE DETAILS AND A SCHEMATIC FOR THE OPTIONAL BOW THRUSTER AND ITS COMPONENTS
2. SEE BOW THRUSTER OWNERS MAUNAL FOR GUIDELINES, INSTRUCTIONS AND MAINTENANCE. (EX: OIL FILL RESIVOIR AND BATTERY STATUS WHEN NOT IN USE.)


**46 OPTIONAL BOW THRUSTER COMPONENT LAYOUT**

4608064L-1	NONE
ENGINEERING DEPT.	4/29/98

This document discloses information for which HUNTER MARINE CORP. has proprietary rights.

**HUNTER**

16 ga (BLUE, RED, GRAY, BLACK) 4 SEPERATE WIRES

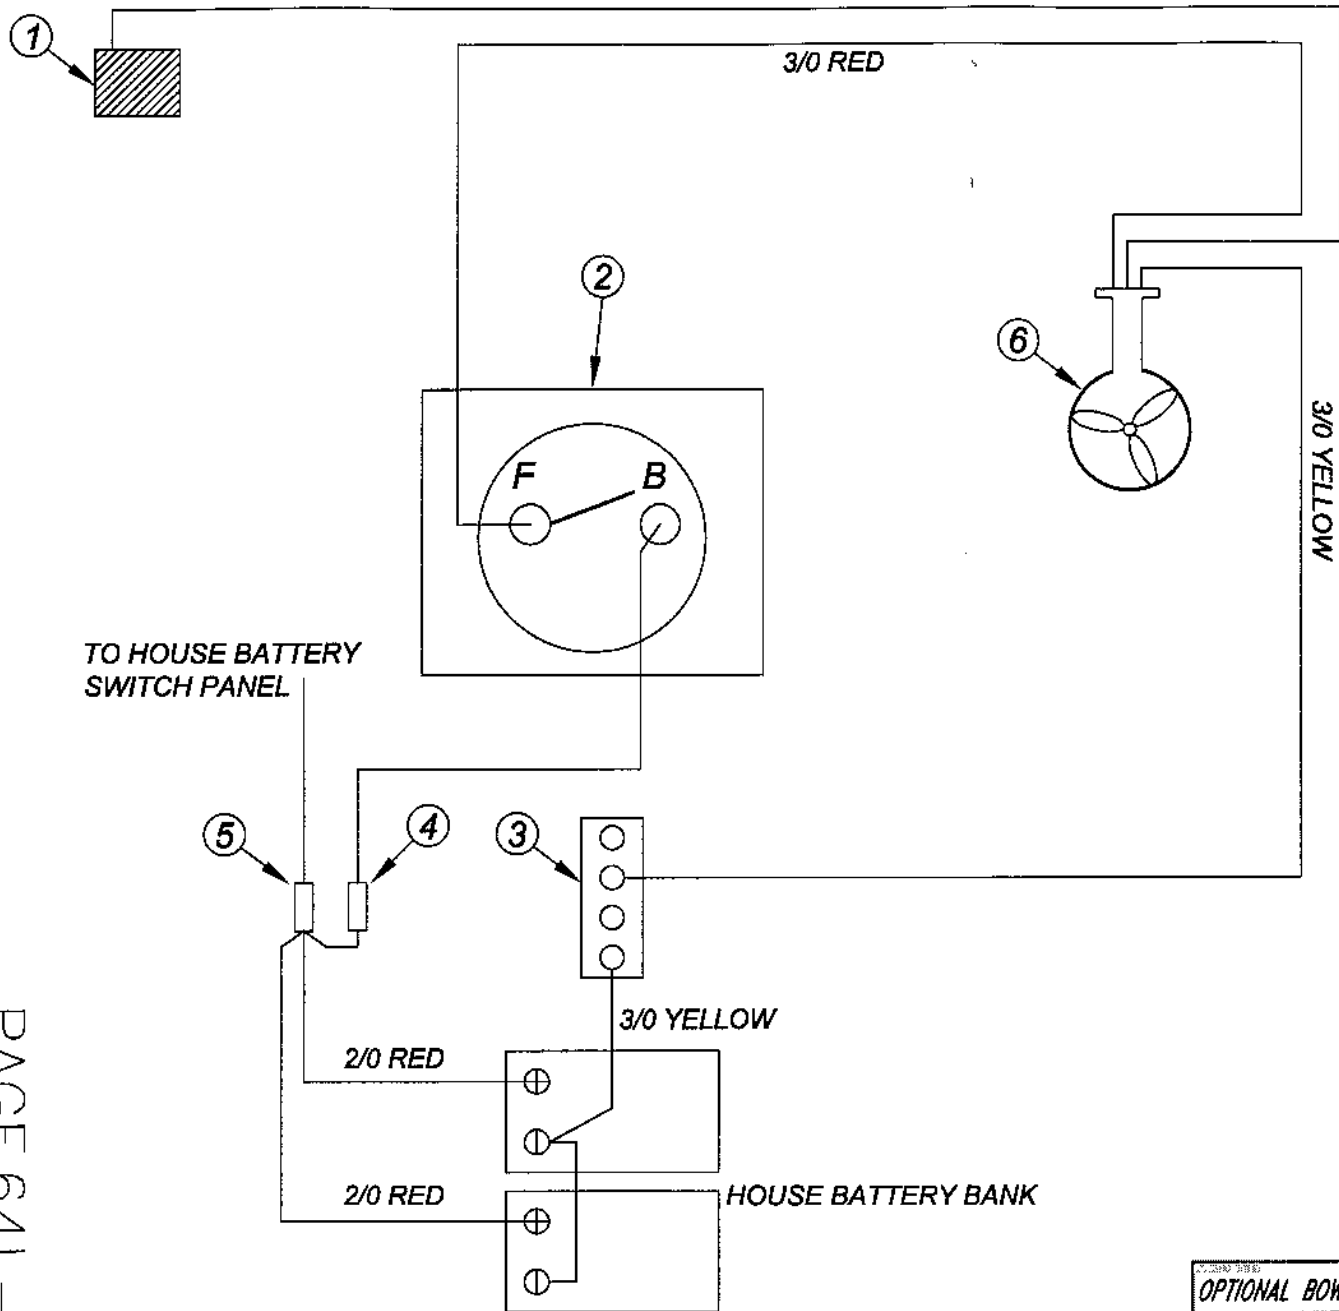

1. BOW THRUSTER REMOTE CONTROL BOX (LOCATED @ COCKPIT CONSOLE)
2. BOW THRUSTER SWITCH PANEL
3. NEGATIVE BUS BAR (LOCATED BEHIND BATTERY SWITCH PANEL)
4. 250 amp IN-LINE FUSE
5. 300 amp IN-LINE FUSE
6. OPTIONAL 12 VOLT BOW THRUSTER