


# 356 SOP ANCHOR WELL COVER INSTALLATION

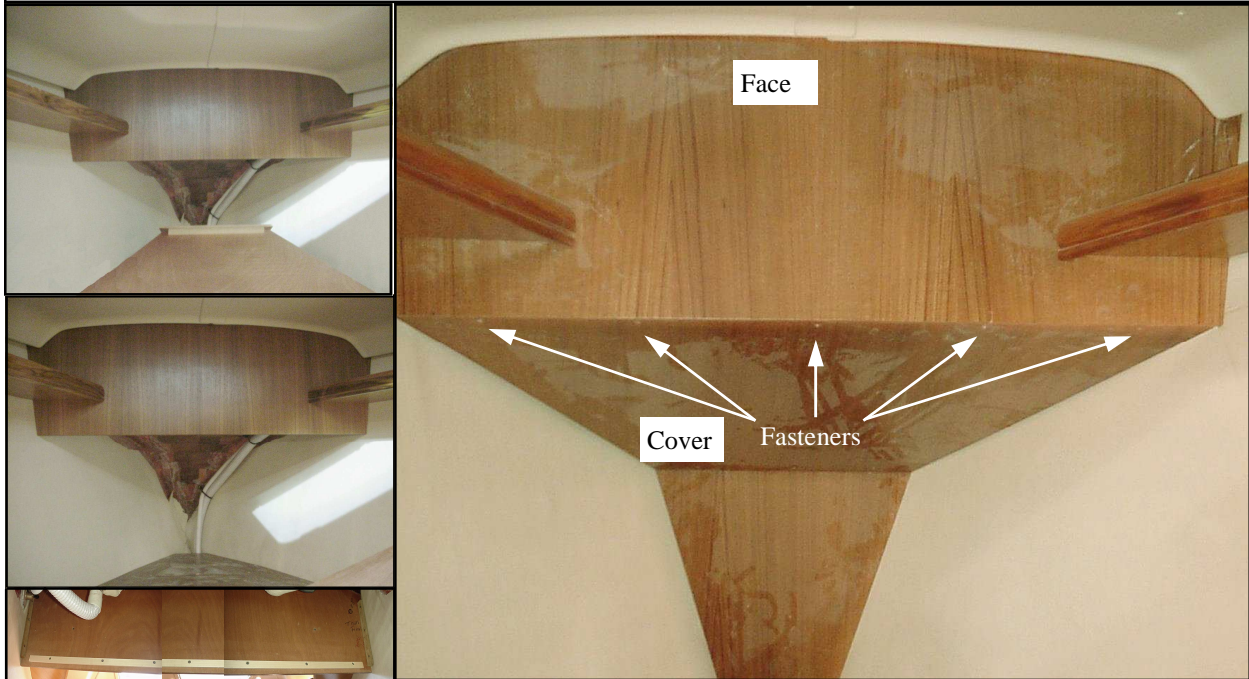

#	#Ea.	Description	Size	Part #
1	1	Anchor Well Cover	320	
2	5	Cover Fasteners	# 10 x 1-1/4" F H wood screw	461410

Note: The face for the cover is installed in the Pre-deck stage.

1. Place the cover into position with the top aft edge on the backside of the face and butting up against the batten ( installed in the cabinet shop).
2. Drill five holes into the aft edge of the cover and into the batten.
3. All holes are about 3/4" fwd of the aft edge of the face. The two end holes are about 4" inboard of end of the cover, center the middle hole and the last two holes will be centered between the end holes and the center hole.
4. Secure the cover to the face using designated fasteners.

Revision Dates:

Expected Time: 20 min.

Page