


356 SOP CO MONITOR INSTALLATION

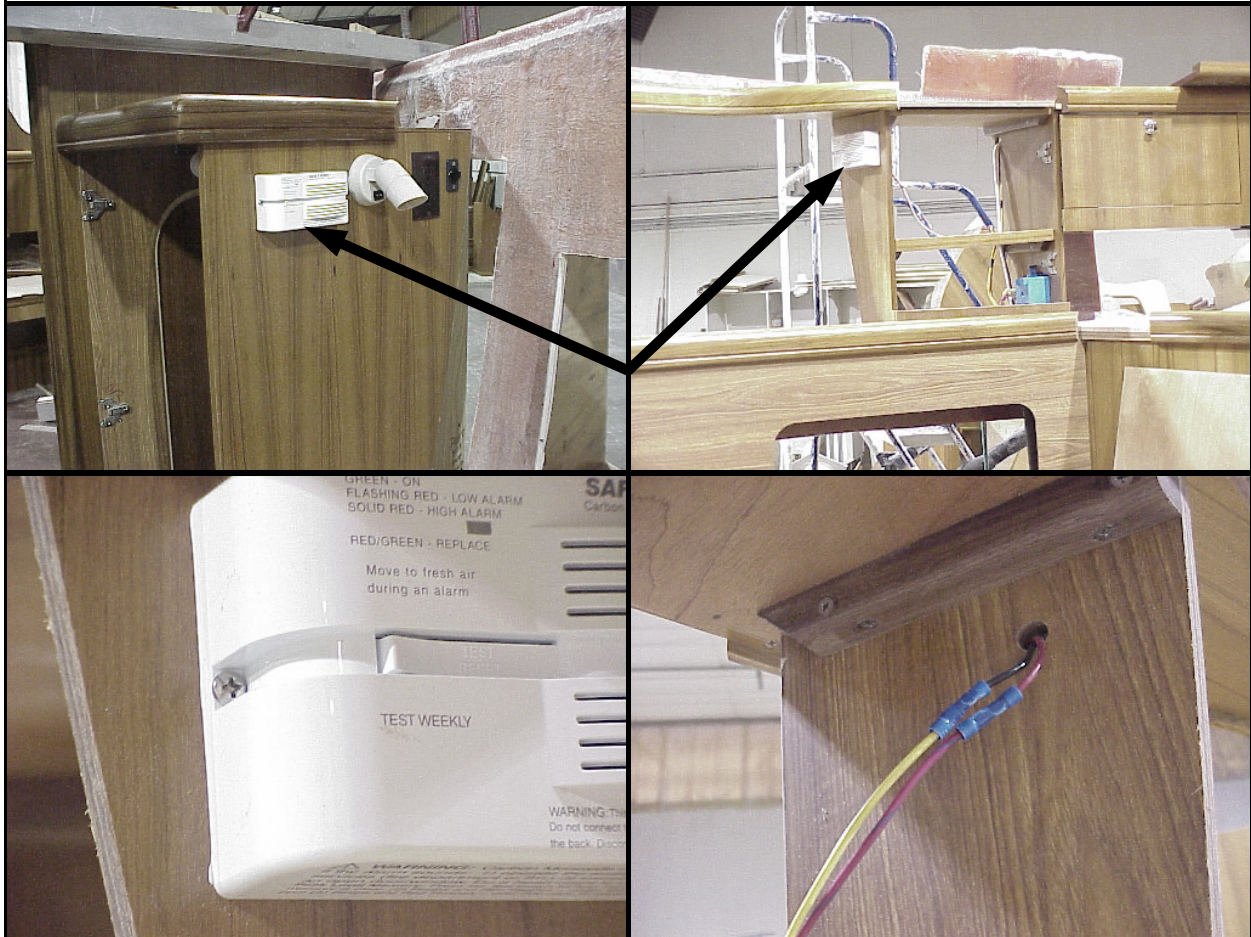

#	Qty.	Description	Size	Part #
1	2	CO Monitor	N/A	353315
2	4	Monitor Fastener	#6 X 5/8" P/H	466870
3	2	Butt connectors	Blue	257570
4	1	Flexible Conduit	3/8"	656405

1. Two carbon monoxide (CO) monitors will be installed in this stage. One will be located on the V-berth port hanging locker, the other will be forward side of the galley upper cabinet.
2. Run the wires from the monitor thru the holes in the furniture then place the monitor on the furniture, making sure it is level, and attach the monitor to the furniture with the designated fasteners.
3. Connect the red wire from the monitor to the red/blue wire from the harness with a blue butt connector.
4. Connect the black wire from the monitor to the yellow wire from the harness with a blue butt connector.
5. Place the wires in 3/8" conduit and attach to the underside of the shelf.

Revision Dates:

Expected Time:

Page