



356 SOP COCKPIT SHOWER HOSE HOOK UP

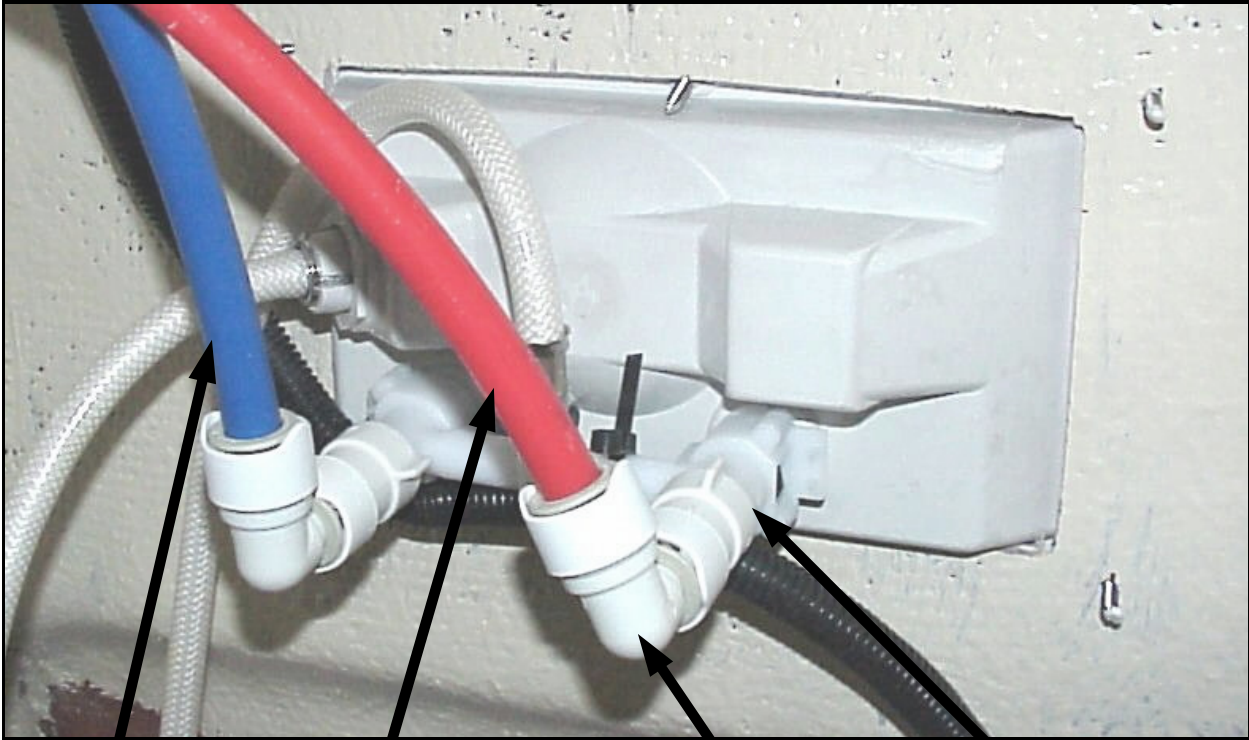

COLD WATER LINE (BLUE) HOT WATER LINE (RED)

STEM ELBOW

ADAPTER

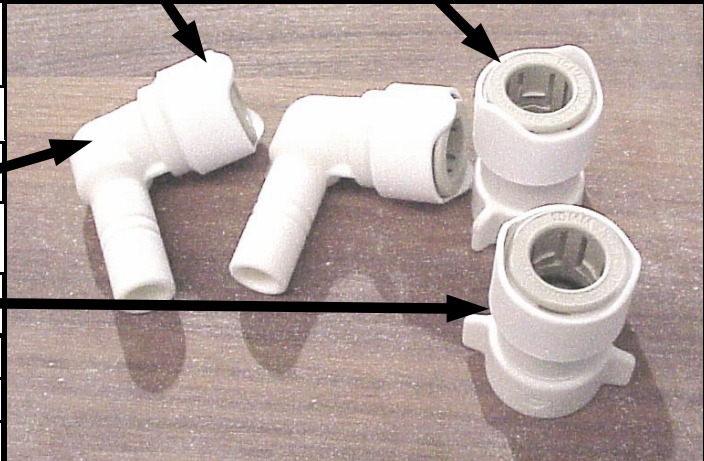

#	#Ea.	Description	Size	Part #
1	2	Adapter	1/2" F-15 MM	355237
2	2	Stem Elbow	15 MM	355234

1. Access to the back of the cockpit shower is gained thru the starboard gullwing seat before the LPG holding tank is installed.
2. On the back of the shower screw the adapters onto the two threaded fittings so the are hand tight. Push the stems of the elbows all the way into the adapters then turn them so they face up.
3. The hot water line (1/2" red tube) will go on the forward elbow and the cold water line (1/2" blue tube) will go on the aft elbow. They will be located in the aft-starboard corner and will need to be run up the side of the hull then inboard under the deck and finally back down to the elbows on the cockpit shower.
4. Cut the hot and cold water hoses to length then slip them all the way into the correct elbow. NOTE: When cutting the tubes the end must be a good square cut to prevent leaking.

Revision Dates:

Expected Time: 20 min.