



356 SOP DIVERTER VALVE (OPTION) INSTALLATION

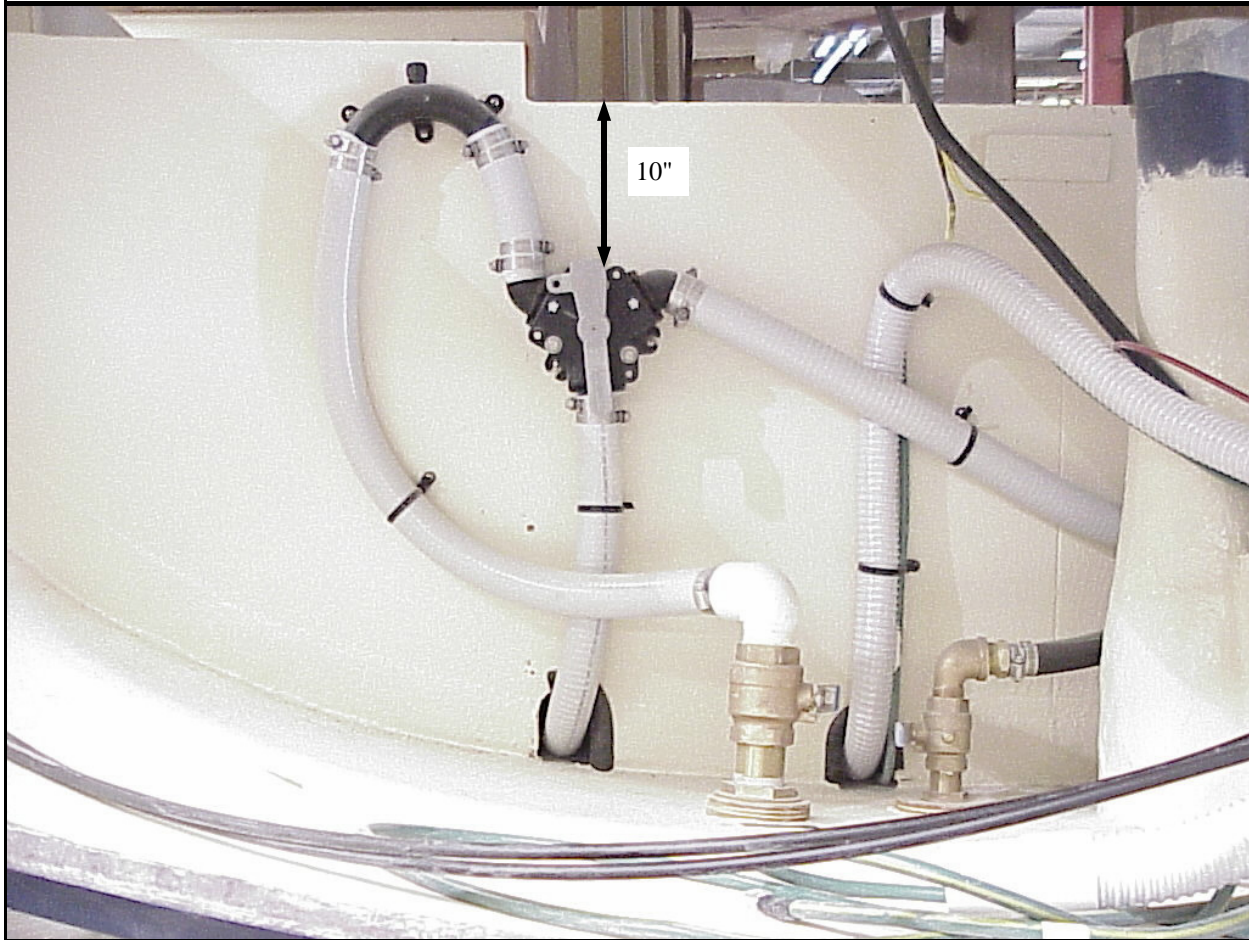

#	Qty.	Description	Size	Part #
1	1	Diverter Valve	N/A	352059
2	3	Diverter Valve Fasteners	#14 x 3/4"	466370

1. The diverter valve is located on the aft side of the aft kickboard directly over the hole where the head discharge hose comes out (the most port hose coming thru the bottom of the kickboard). The top of the diverter valve should be 10" below the top of the kickboard. The inlet (there are arrows on the diverter valve to indicate the inlet and the outlets) should face directly down.
2. Mark the mounting hole locations then drill the marked locations using a 3/16" drill bit using caution not to drill all the way thru the kickboard.
3. Secure the diverter valve to the kickboard with #14 x 3/4" woodscrews, use washers as spacers if necessary to prevent the screws from going thru the kickboards.

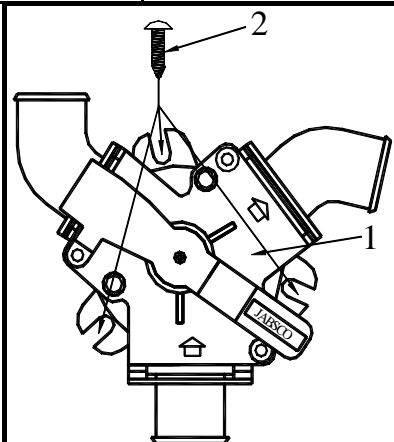

Revision Dates:

Expected Time: 5 min.