


# 356 SOP ENGINE KILL CABLE TO BRACKET INSTALLATION

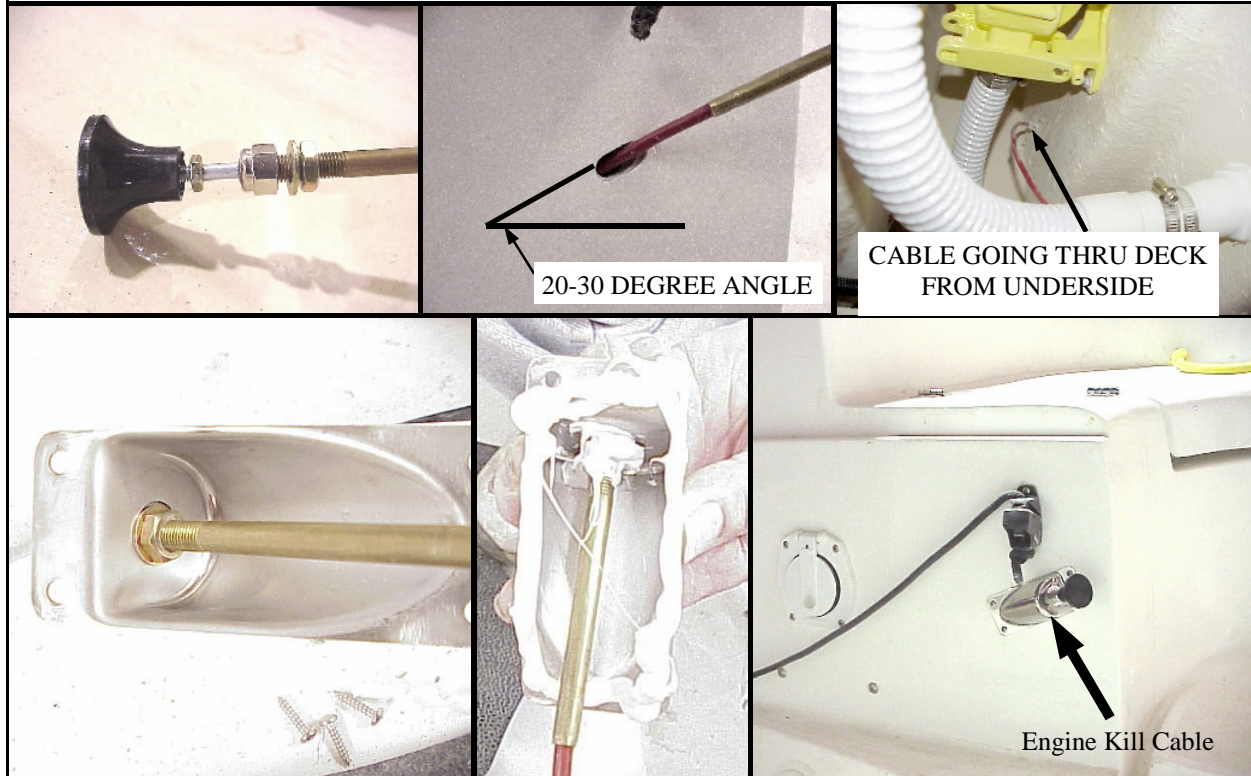

#	#Ea.	Description	Size	Part #
1	1	Engine Kill Cable Bracket		
2	4	Bracket Fasteners	#6 x 5/8" PH	466870
3	1	Flat Washer	3/8"	469270

1. The engine kill cable bracket will be located on the port side of the companion way walk through.
2. Measure and mark, 8" down from the top of the gullwing embossment, and 4" aft of the forward edge of the embossment, this will be the center for the 1/2" x 1" slot that will be cut into the deck using a 3/8" dremel bit. This slot will need to be cut at a 20-30 degree angle (see pictures).
3. Cable access is gained through the port swimseat compartment. Remove the knob from the end of the cable then place the end of the cable thru the hole in the port cockpit walk through.
4. On the top side of the deck remove the knob jam nut and the locknut which will leave washer and a nut on the cable then place the bracket on the cable.
5. Place a 3/8" flat washer and the locknut that comes with the cable on the fwd end of the cable then adjust the forward washer to cover the bracket hole and tighten the cable nut.
6. Place the bracket over the hole in the deck at an 20 to 30 degree angle (see pictures).
7. Mark the mounting hole locations then drill the marked locations using a 3/32" drill bit.
8. Caulk around the bracket, inside cable end, and screw holes with 739 white caulk. Secure the bracket to the deck with #6 X 5/8" panhead screws.
9. Clean up excess caulk with alcohol.
10. Screw knob onto shaft, and tighten the jam nut.

Revision Dates:

Expected Time: 15 min.