


356 SOP HEAD AREA CORNER TRIM INSTALLATION

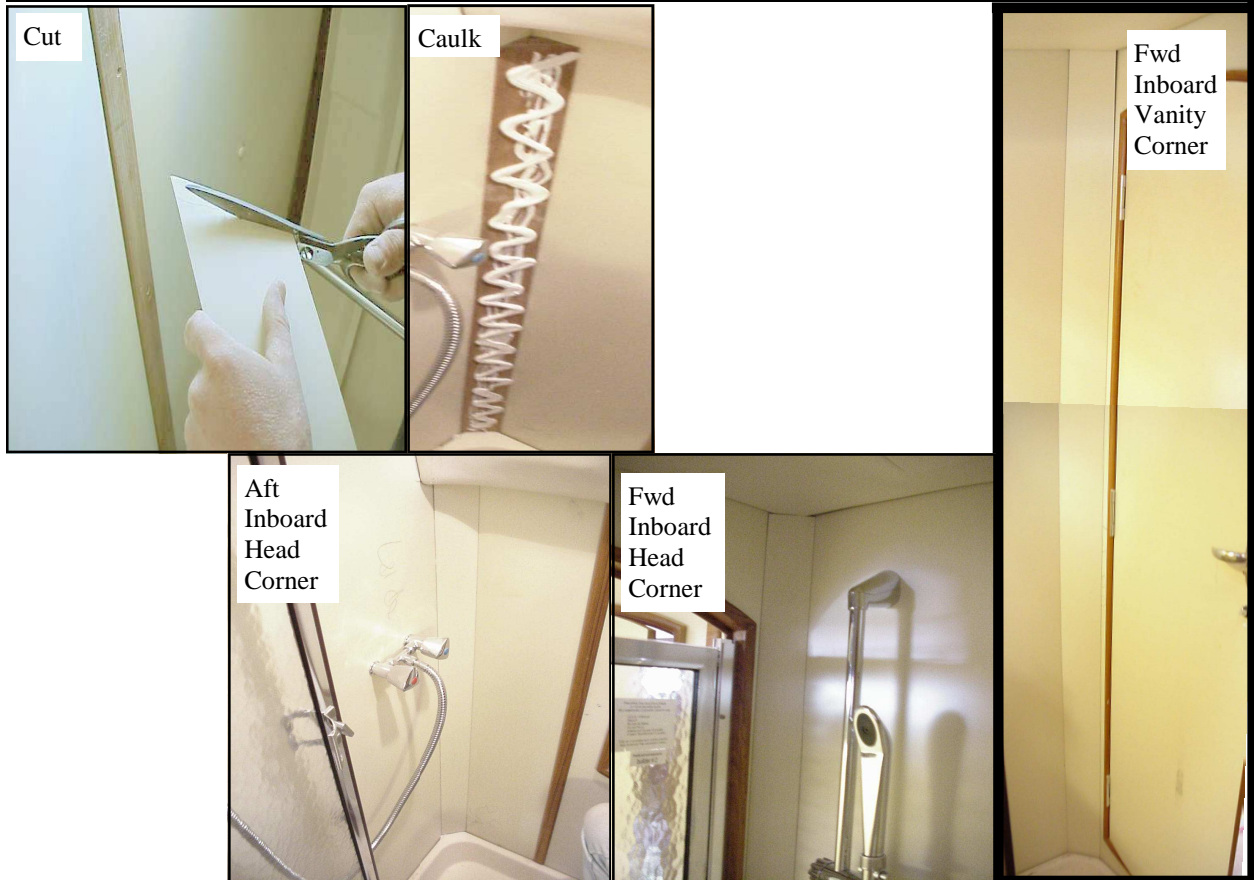

#	#Ea.	Description	Size	Part #
1	1	Formica	4" x 73"	
2	2	Formica	2 -1/2" x 73"	
3	N/A	Liquid Nails Caulk	N/A	101520
4	N/A	Masking Tape	2" wide	

1. Place the Formica (3 pieces that come in a kit) in the corners of the head and measure the length. (The 4" x 73" wide piece will go in the fwd vanity inboard corner.)
2. Using scissors cut the Formica to correct length.
3. Apply liquid nails caulk to the back of the Formica and place on the corner wood trim in the head.
4. Tape both edges of the Formica down with 2" wide masking tape to hold the Formica in place until the caulk is set.

Revision Dates:

Expected Time: 15 min.

Page