
## 356 SOP PROPANE PANEL INSTALLATION

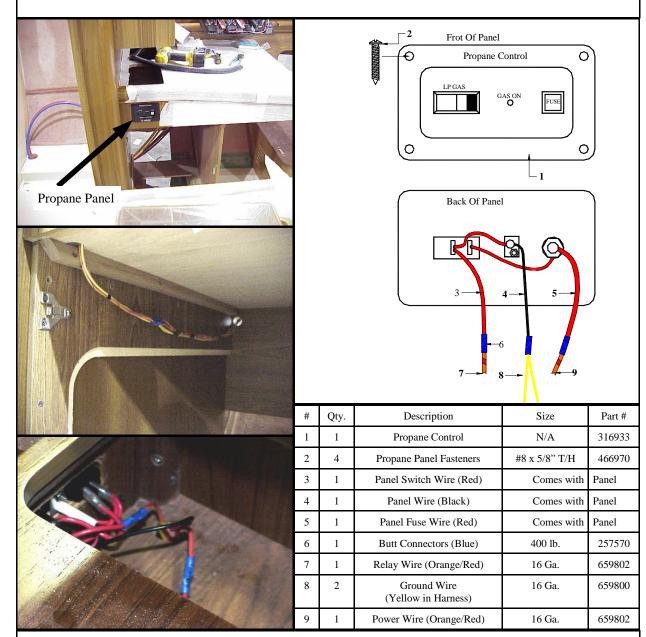

- 1. Locate the cutout for the propane panel on the inboard chart locker face then place the propane panel in position (make sure panel is straight and centered) and secure it to the chart locker using the designated fasteners.
- 2. Attach one of the orange/red wires from the harness to one of the red wires on the panel, connect the other orange/red from the harness to the other red wire from the panel using the designated connectors.
- 3. Attach the black wire from the panel to the yellow wires from the harness using the designated connectors.
- 4. Secure the wires to the bottom of the chart locker using tie-wraps

Revision Dates: Expected Time: Page