

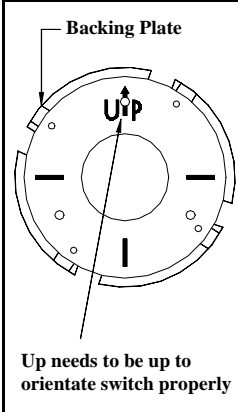


356 SOP Q-BERTH READING LIGHTS INSTALLATION

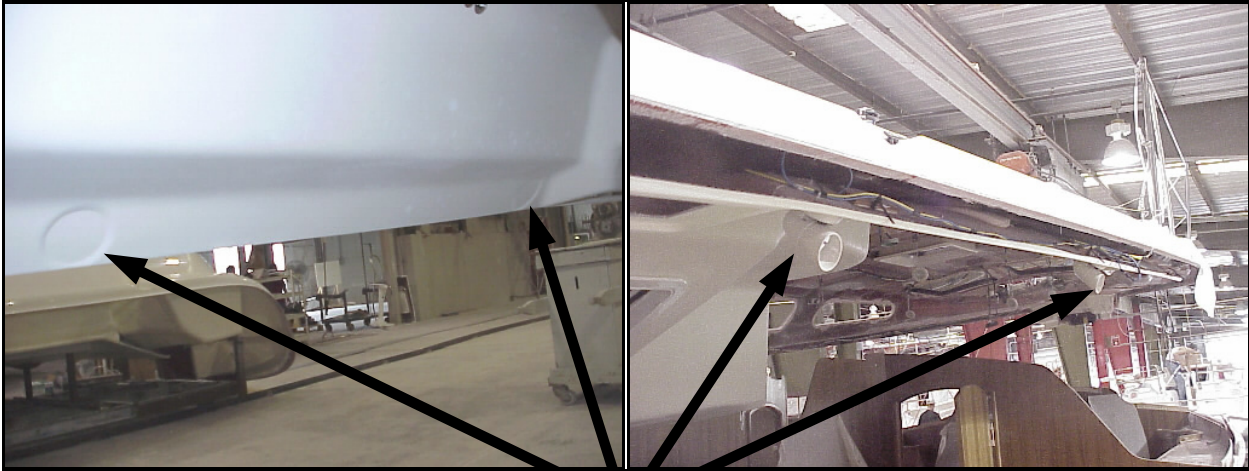

READING LIGHT LOCATIONS IN THE Q-BERTH (STARBOARD SIDE)

BLUE WIRE FROM LIGHT TO BLUE WIRE FROM HARNESS & BLACK WIRE FROM LIGHT TO YELLOW WIRE FROM HARNESS

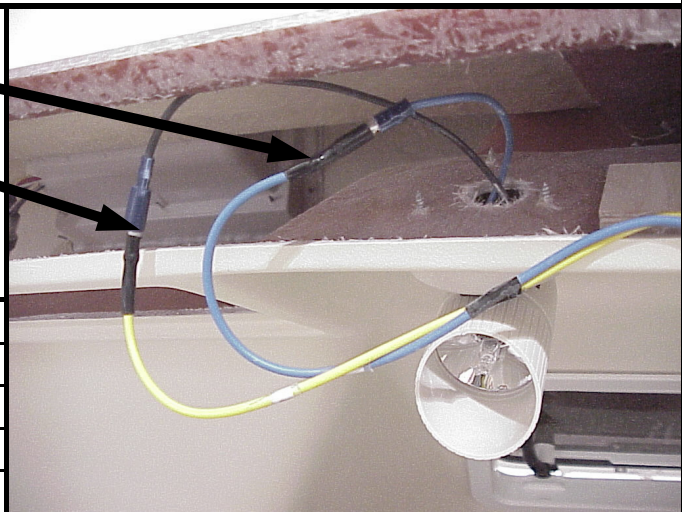

#	Qty.	Description	Size	Part #
1	2	Reading Light (Q-berth)	Beige	255662
2	6	Reading Light Fasteners	#6 x 5/8" P/H	466870
3	2	Bullet Plug	16-14 GA	P2900
4	2	Bullet Receptacle	16-14 GA	P2901

1. Strip the sheathing on the black & blue wire from the reading light back 5/8" then attach a bullet plug to the black wire and a bullet receptacle to the blue wire.
2. Reading lights will be located in the center of the two embossment on the starboard side of headliner in the Q-berth.
3. Drill thru the center of the embossments with a 1-1/8" hole saw.
4. Place the backing plates centered in the headliner embossment so the "up" on the backing plate is up (this is to orientate the switch down when installed) then mark the mounting hole locations.
5. Drill the marked locations using a 3/32" drill bit.
6. Secure the backing plate to the headliner with the #6 x 5/8" fasteners (make sure "up" is up).
7. Push the wires from the reading light through the center hole.
8. Attach the reading light to the backing plate and twist to lock into place so the switch is down.
9. Plug the reading light blue wire to the headliner blue wire.
10. Plug the reading light black wire to the headliner yellow wire.

Revision Dates:

Expected Time: 30 min.