
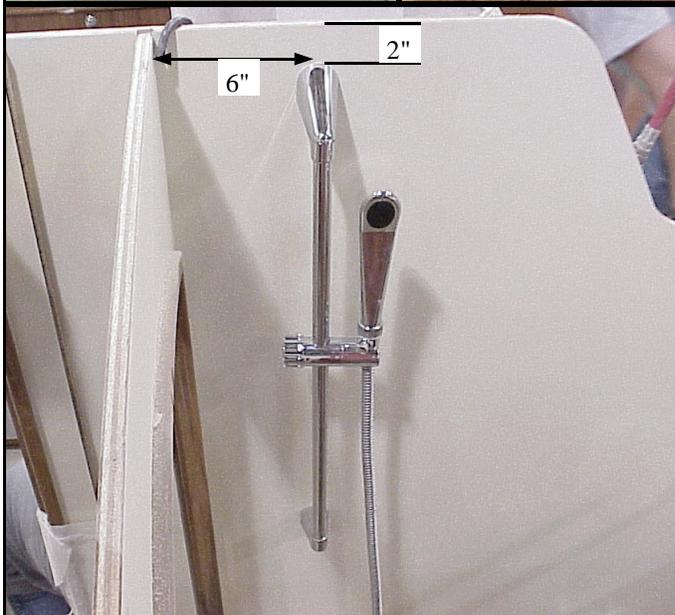


356 SOP SHOWER INSTALLATION

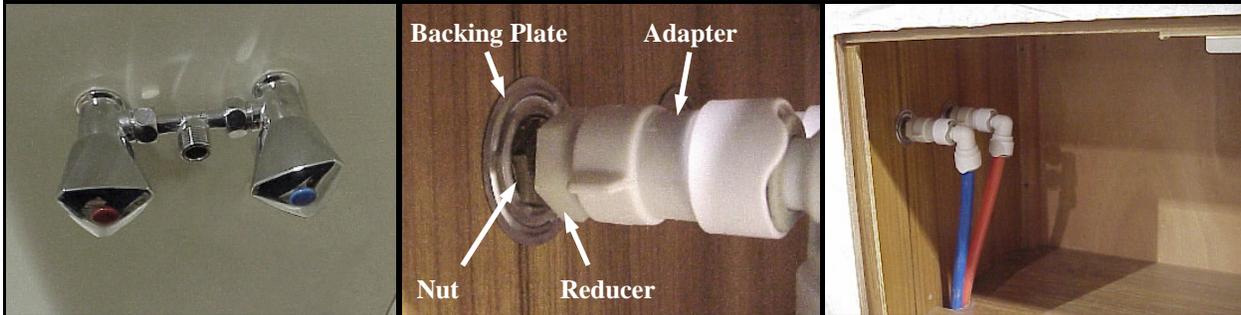

#	Qty.	Description	Size	Part #
1	1	Shower Combination	14118	351696
2	2	Adapter	1/2" F- 15mm	355237
3	2	Stem Elbow	15 mm	355234
4	2	Bracket Fasteners	#8 x 5/8 P/H	466970

1. From inside the shower stall place the shower faucet stems thru the two holes in the port companionway bulkhead so the hot water knob is on the left (forward) side. On the inboard side of the bulkhead place a backing plate and a nut over each of the faucet stems then tighten them well. Attach the reducers that comes with the shower kit to the faucet stems then connect the designated adapters to the reducers. Tighten all of these components well. Attach stem elbows to the adapters then cut the water lines to the correct length then attach them to the elbows (the hot water line goes on the forward fitting).
2. Back on the outboard side of the bulkhead (inside the shower stall) place the top mounting bracket for the sliding rail shower head holder so the center is 6" aft of the middle head bulkhead and the top is 2" below the top of the bulkhead. Mark the mounting hole location then drill the marked location with a 1/8" drill bit (make sure not to go all the way thru the bulkhead). Attach the bracket to the bulkhead using the designated fastener.
3. Slide the shower head holder onto the round bar then place one end of the bar into the top bracket. Make sure the bar is plumb then place the other bracket onto the bottom of the bar and mount the bracket to the bulkhead in the same manner as the top bracket. Snap the bracket covers onto the brackets.
4. Attach one end of the flexible hose to the faucet and the other end to the shower head. Place the shower head into the holder.

Revision Dates:

Expected Time:

Page