


356 SHOWER OUTBOARD GRAB RAIL SOP INSTALLATION

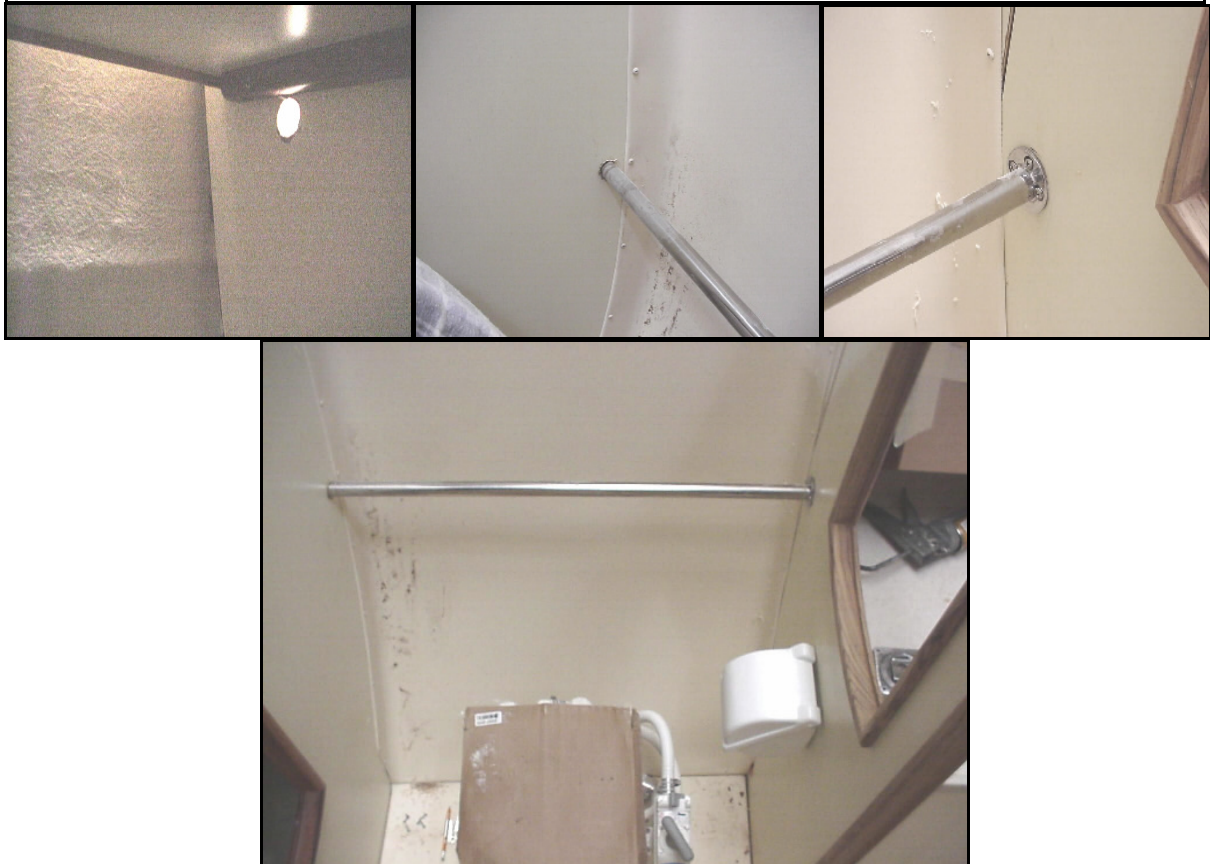

#	Qty.	Description	Size	Part #
1	1	1" Grab Rail	356	
2	3	Fasteners	#10 x 1/2" P H	466590

1. The grab rail is located outboard of the toilet in the head.
2. From inside the aft vanity hamper on the fwd wall, drill a hole using a 1" hole saw, 5 - 3/4" inboard of the fwd outboard edge, and 1/2" below the bottom of the top shelf.
3. From the outside of the aft vanity hamper (standing in the shower) slide rail into the 1" hole.
4. Slide the fwd end of the grab rail to the fwd shower wall, placing the panel edge 1/2" inboard of the shower panel edge.
5. Adjust the fwd end of the grab rail until eye level.
6. Secure the fwd end using the designated fasteners.

Revision Dates:

Expected Time: 5 min.

Page