


356 SOP UPPER VANITY INSTALLATION

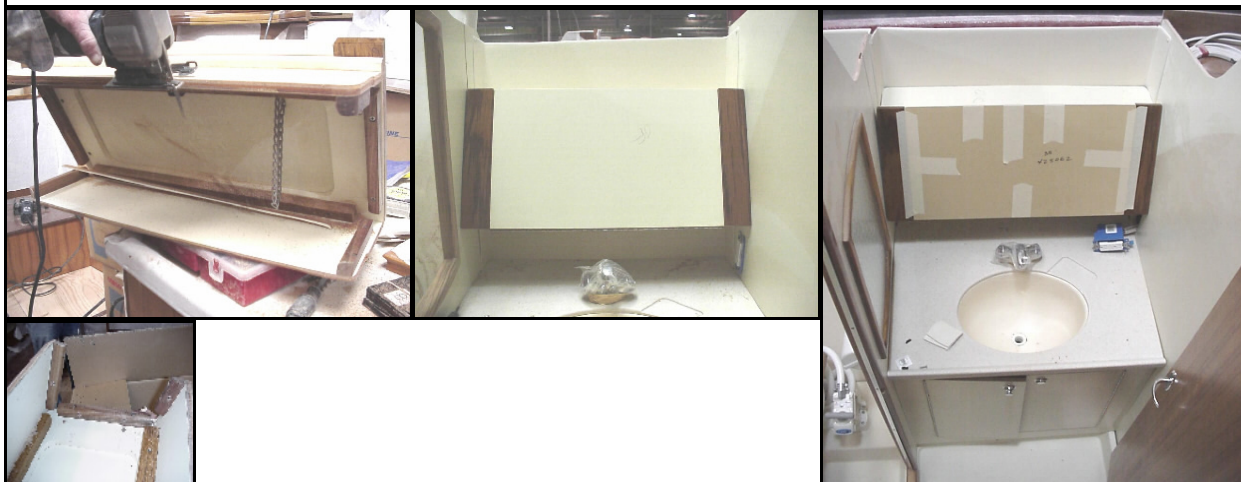

#	Qty.	Description	Size	Part #
1	1	Vanity Upper	320	DF550001
2	8	Fwd. Vanity Upper Fasteners	#10 x 1 1/2" F/H	461330

1. Place the upper vanity in position (located above the lower vanity).
2. The upper vanity will fit into the headliner and sit flush on top of the upper receiver and flush with the forward head bulkhead.
3. Measure the gap on the top shelf between the shelf outboard edge and the hull panel.
4. Scribe the measurement on the outboard edge of the lower shelf. Cut this measurement off at a 30 degree angle.
5. Cut the top shelf outboard edge at a 30 degree angle.
6. Drill the battens with a C-7 drill assembly.
7. Secure the battens to the forward head bulkhead and aft head bulkhead using the designated fasteners.

Revision Dates:

Expected Time: 15 min.

Page