
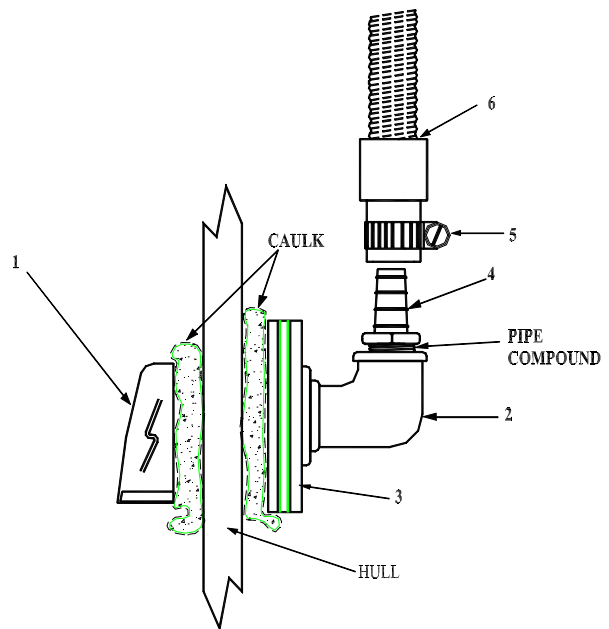


356 SOP WATER TANK VENT INSTALLATION

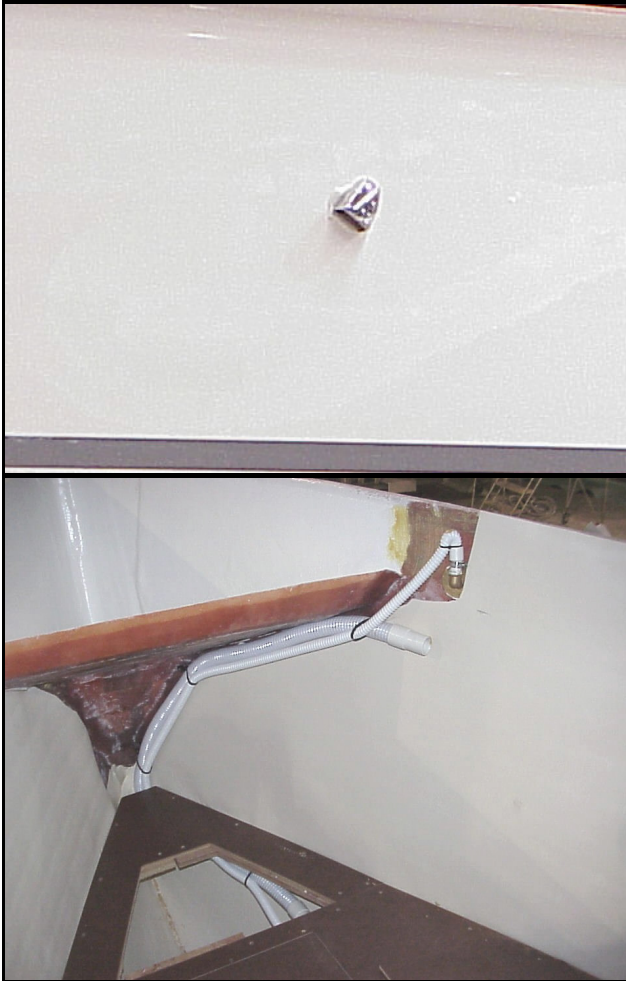

#	#Ea.	Description	Size	Part #
1	1	Forward Water Tank Vent	#503-4	353157
2	1	Brass Elbow	3/4"	353157
3	1	Wood Doughnut	1/2"	N/A
4	1	Hose Barb Fitting	1/2" MPT X 3/4" HB	355425
5	1	Vent Hose Clamp	#10	353355
6	1	Vent Hose and Cuff	3/4"	358017

1. Locate the 7/8" hole on the starboard side of V-berth area approximately 6" down from the hull flange and 3" aft of the anchor well.
2. Clean the area and hardware with alcohol then using designated caulk (Page 1, #3) caulk around the hole on the outside and inside of the hull.
3. From the outside of the hull place vent in position.
4. From the inside of the hull place the designated wood doughnut in position.
5. Apply pipe compound to the male threads on the designated elbow then secure the vent in place by attaching the elbow (make sure the elbow end faces up).
6. Coat the male threads on the hose barb fitting with pipe compound then attach the hose barb fitting to the elbow.
7. Clean up all excess caulk with alcohol.
8. Attach the vent hose to the hose barb using the designated hose clamp.
9. Run the vent hose up about 5" and then back down to make a loop then loosely attach a tie-wrap around the hose and hose clamp to prevent the loop from coming undone.
10. Leave the other end of the hose loose as it will be attached with the water fill hose and together they will be run aft to the water tank.

Revision Dates:

Expected Time: 15 min.

Page 2