


356 SOP HEATER EXCHANGE HOSE RUN INSTALLATION

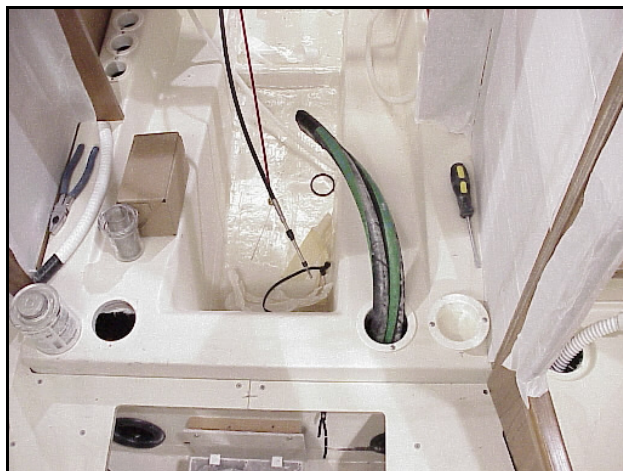

#	#Ea.	Description	Size	Part #
1	2	Heater Exchange Hose	5/8" X	
<ol style="list-style-type: none"> 1. The heater exchange hoses were attached to the back of the water heater during the installation of the water heater. Tape the loose ends of the hoses together. 2. Run the two hoses along the inboard side of the water heater then thru the hole in the forward-inboard corner of the water heater compartment. Continue under the pan then come up out of the port-forward hole in the engine compartment. 3. The hoses will be attached to the engine later. 				
Revision Dates:			Expected Time:	Page 18