
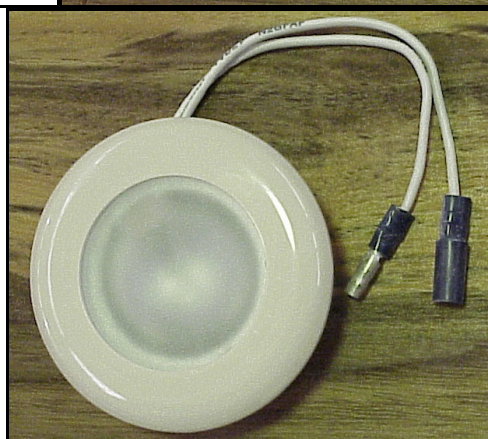
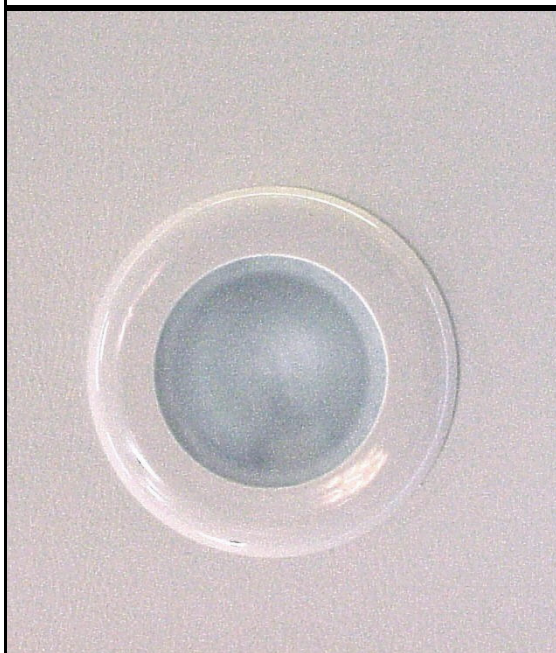


356 SOP HALOGEN LIGHT INSTALLATION

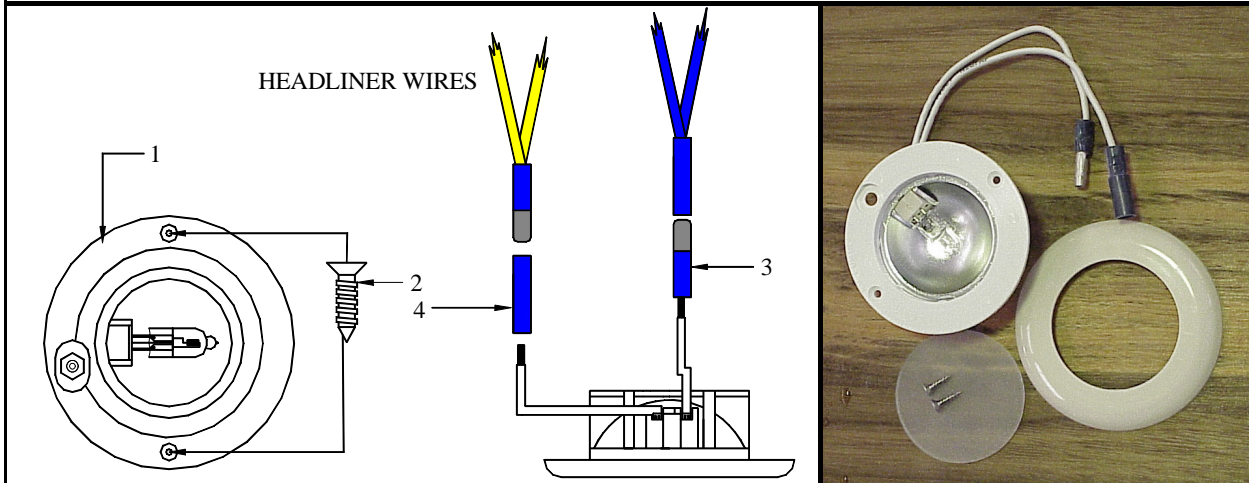

#	Qty.	Description	Size	Part #
1	5	Halogen Light	Beige	255695
2	10	Halogen Light Fasteners	Comes With Light	255698
3	5	Bullet Plug	16-14 GA	P2900
4	5	Bullet Receptacle	16-14 GA	P2901

1. There are five halogen lights without a switch in the 356 boat. They are all located in the main cabin area. Two are just aft of the windshield, two are located just port and starboard of the mid hatch, and the last is located starboard of the companionway walk-thru. They will all be secured to the light stems after the whisper headliner has been installed.
2. Crimp a bullet plug onto one of the wires from the light and crimp a bullet receptacle onto the other wire.
3. Remove the light cover and save the fasteners. Place the light in position then mark the mounting hole locations.
4. Drill the marked locations with a 3/32" drill bit.
5. Pull the blue and yellow wires out of the light stem then plug the harness wires and the light wires together.
6. Secure the light to the headliner using the fasteners that came with the light.
7. Snap the light cover in place.

Revision Dates:

Expected Time: