


# 356 SOP MAIN CABIN READING LIGHTS INSTALLATION



PORT READING LIGHT IN THE MAIN CABIN

STARBOARD READING LIGHT IN THE MAIN CABIN

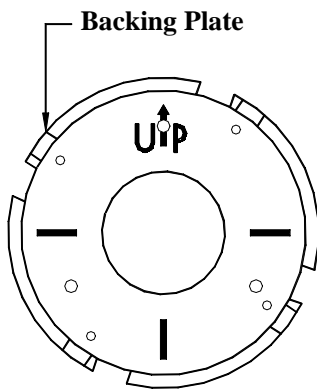

**"Up" needs to be towards  
the outboard side to  
orientate switch properly**

#	Qty.	Description	Size	Part #
1	2	Reading Light (Q-berth)	Beige	255662
2	6	Reading Light Fasteners	#6 x 5/8" P/H	466870
3	2	Bullet Plug	16-14 GA	P2900
4	2	Bullet Receptacle	16-14 GA	P2901

1. Strip the sheathing on the black & blue wire from the reading light back 5/8" then attach a bullet plug to the black wire and a bullet receptacle to the blue wire.
2. Reading lights will be located over the holes that are drilled into the forward end of the ABS headliner in the main cabin, one on both port and starboard side.
3. Pull the harness wires out thru the hole if they are not already out.
4. Place the backing plates centered over the hole so the "up" on the backing plate is on the outboard side (this is to orientate the switch inboard when installed) then mark the mounting hole locations.
5. Drill the marked locations using a 3/32" drill bit.
6. Secure the backing plate to the headliner with the #6 x 5/8" fasteners (make sure "up" is outboard).
7. Push the wires from the reading light through the center hole.
8. Plug the reading light blue wire to the headliner blue wire.
9. Plug the reading light black wire to the headliner yellow wire.
10. Attach the reading light to the backing plate and twist to lock into place so the switch is inboard.

Revision Dates:

Expected Time: