
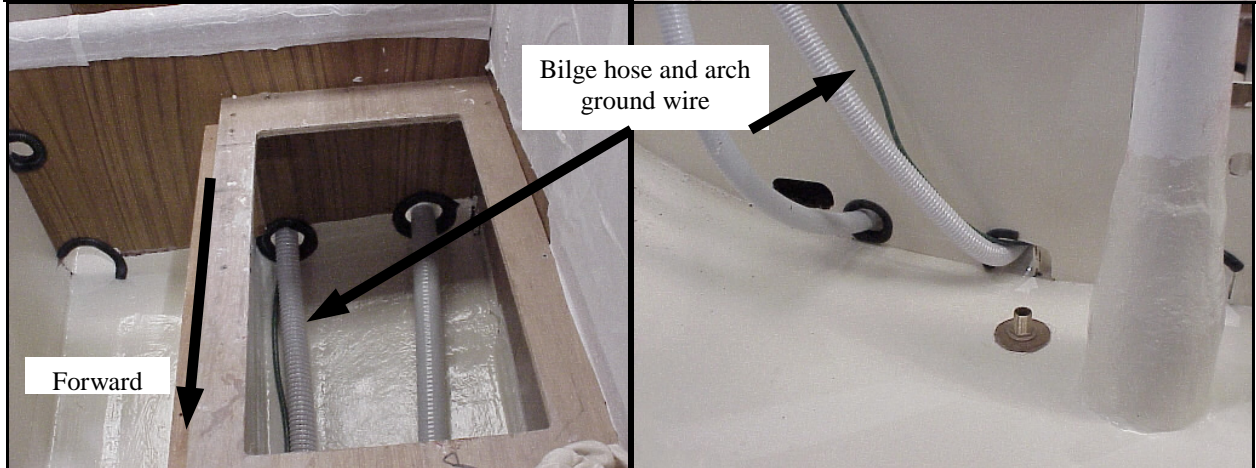


356 SOP MANUAL BILGE HOSE & RADAR ARCH GROUND INSTALLATION

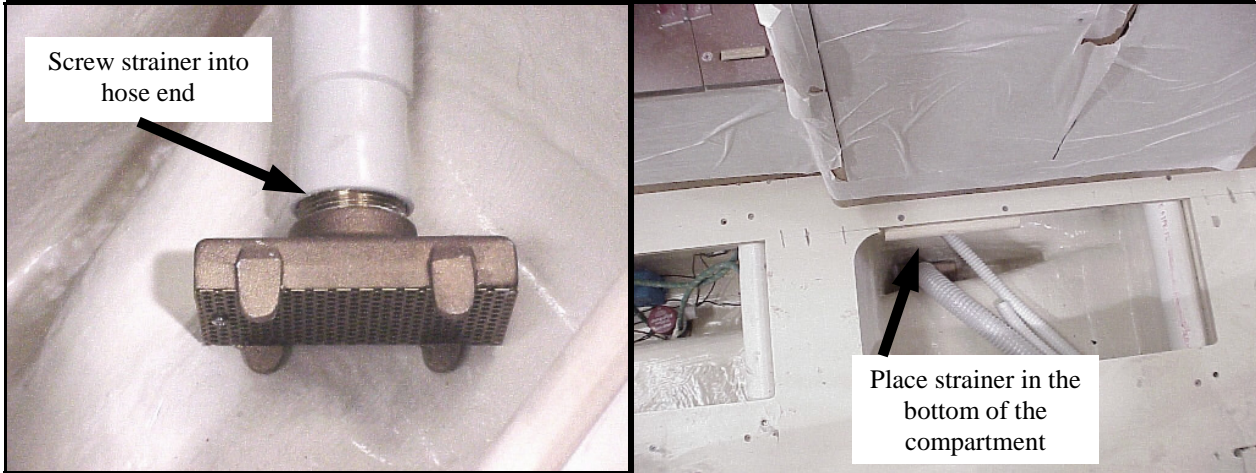

	Arch ground wire In front keel compartment		#	Qty.	Description	Size	Part #
			1	1	Bilge Hose (Shieldvac)	1-1/2" x 20'	
			2	1	Navy Pump Strainer		
			3	4	Tie-wraps		
			4	4	Tie-wrap Fasteners		

1. Screw the strainer onto the hose and place it down in the bottom of the aft keel compartment.
2. Run the other end of the hose thru the hole in the aft port corner of the compartment then continue aft thru the hole in the pan so the hose comes out into the port section of the Q-berth bunk. Continue aft along the inboard face then thru the storage locker to the aft end of the boat.
3. Roll the extra hose up and place out of the way.
4. The radar arch ground was placed in the hull during the module stage, the aft end will be in the port section of the Q-berth bunk. Run this end aft along the manual bilge hose and at the aft end of the boat roll the extra wire up and place it out of the way.
5. The forward end of the radar arch ground will be in the sump pump compartment. Run this end of the wire up to the forward keel compartment, it will be attached to the keel in the keeling stage.
6. Once the arch ground wire is run secure the hose and ground wire to the bunk support using tie-wraps.