
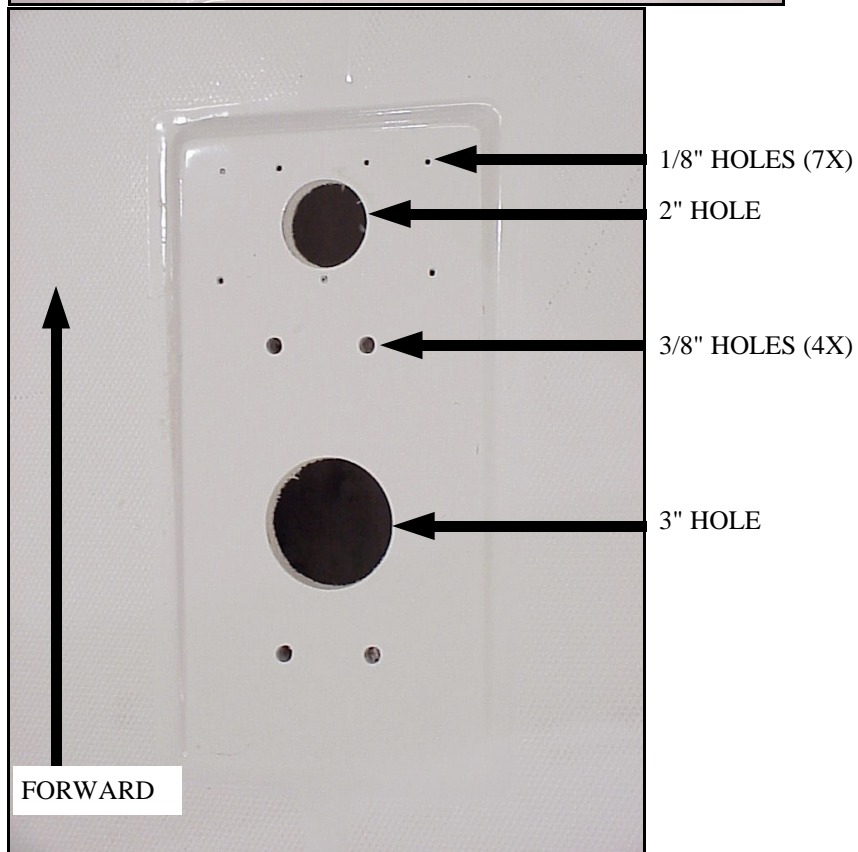


356 SOP MAST STEP HOLES

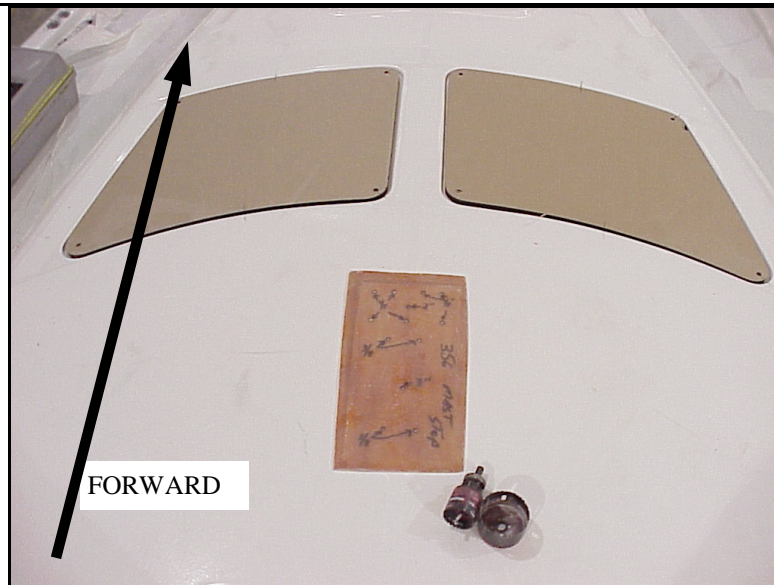

1. There is a fiberglass splash that has the hole locations and sizes for the mast post and wire chase cover.
2. Use the fiberglass splash to mark hole locations.
3. Drill the holes with the corresponding sized drill bits marked on the splash.
4. Dremel the edges of the smaller sized drill bits.

Revision Dates:

Expected Time: 10 min.