


# 356 SOP MAST WIRE CHASE COVER INSTALLATION

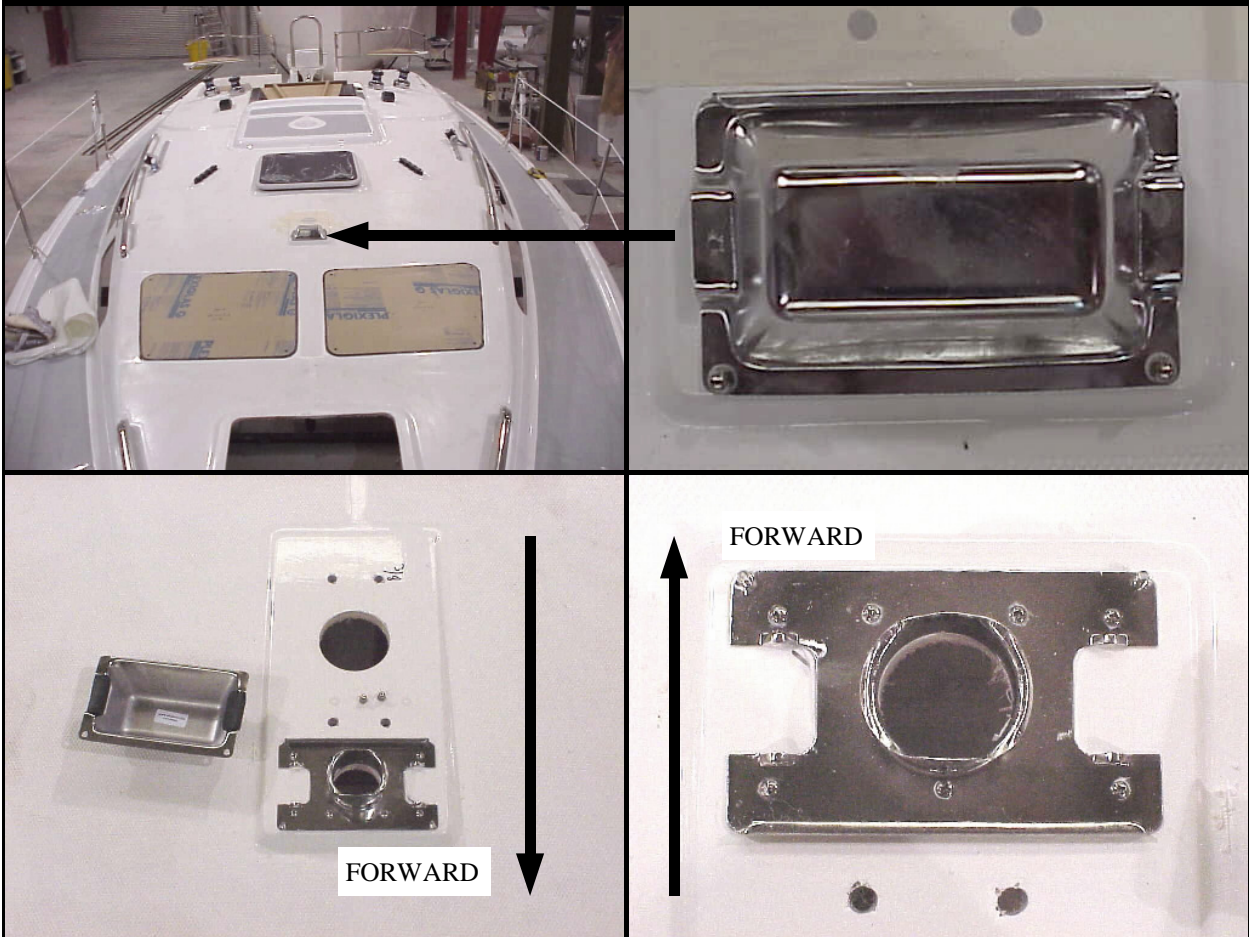

#	#Ea.	Description	Size	Part #
1	1	Wire Chase Cover Assembly		
2	7	Wire Chase Cover Fasteners	Come With	Assembly

1. The center hole and the mounting holes should have been drilled during the mast step holes SOP. Dremel the edge of the mounting holes then clean the deck and hardware with alcohol.
2. Caulk the mounting holes, the outer edge of the wire chase cover base and around the center hole with the designated caulk (page 1, #1).
3. Place the mast wire chase cover base in position so it is lined up with the mounting holes (three aft and four forward).
4. Secure the cover base to the deck using the designated fasteners.
5. Place the cover top onto the base then secure the top with the nylon washers and cap nuts that come with the cover assembly. Only hand tighten the nuts as the top will need to be removed later to run the wires.

Revision Dates:

Expected Time: 10 min.