


356 SOP PIN BOARD TRACK INSTALLATION



THE PINBOARD TRACKS
FITS INTO THE
COMPANIONWAY
OPENING

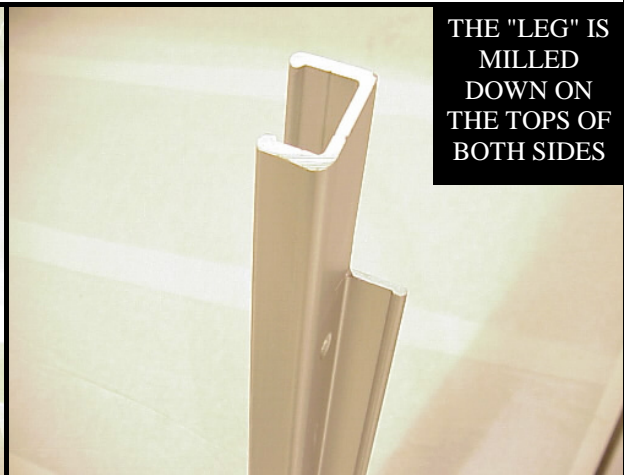

THE "LEG" IS
MILLED
DOWN ON
THE TOPS OF
BOTH SIDES



PUSH THE
TRACK AS
FAR AFT AS
IT WILL GO

#	#Ea.	Description	Size	Part #
1	1	Pinboard Track	356	
2	10	Pinboard Track Fasteners	#10 x 1/2" Ovalhead	

1. The pinboard track will be located in the companionway opening. The track is a one piece unit with pre-drilled holes for mounting. The "leg" extending off the backside of the channel is milled down on the top of both sides to facilitate installation.
2. Place the track into the companionway opening from the forward side (with the "leg on the forward side of the track) then push the track all the way aft until the "leg " contacts the deck and down until the bottom of the channel contacts the deck.
3. Mark the mounting hole locations.
4. Remove the track then drill the marked locations using a 1/8" drill bit.
5. Dremel the holes to expose the raw edge of glass (only edge of hole).
6. Clean the surface and hardware with alcohol.
7. Caulk all along the opening where the track will be with white 739 caulk.
8. Replace the track (try not to push to much caulk away) then secure the track to the deck with #10 x 1/2" ovalhead screws.
9. Clean up excess caulk with alcohol.

Revision Dates:

Expected Time: 15 min.