


# 356 SOP SLIDER TRACK INSTALLATION

PAGE 42

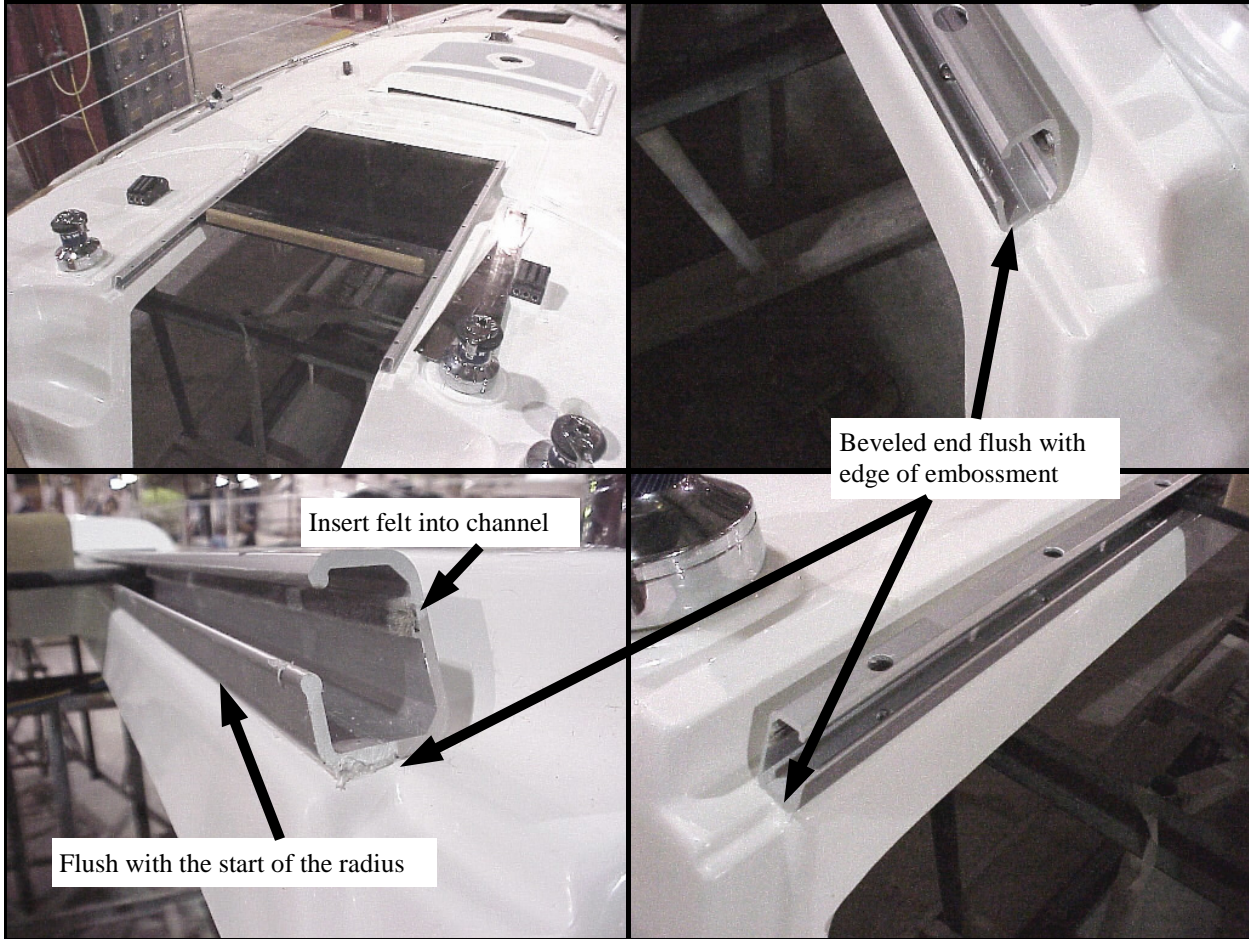

#	#Ea.	Description	Size	Part #
1	1	Slider Track Set	356	
2	2	Track Felt		
3	16	Track Fasteners	#10 X 1" O/H	465630

1. Set the slider tracks on both sides of the companionway walkthrough so the beveled end is aft, the large access holes are on top, and the opening along the length of the track faces inboard. Position the track further by making sure the bottom edge of the beveled end is flush with the small embossment on the deck and the bottom inboard corner of the track is flush with the start of the radius on the deck (see pictures).
2. Mark the mounting hole locations then remove the track and drill the marked locations with a 5/32" drill bit.
3. Dremel the edge of the holes to expose raw glass then clean the deck and the hardware with alcohol.
4. Caulk the holes and the deck where the track will be with the designated caulk (page 1, #1).
5. Lay the track back into position then secure the track to the deck using the designated fasteners.
6. Clean up excess caulk with alcohol.
7. Insert the felt strip into the channel molded into the track then cut to length.
8. Slide the hatch cover into the track and make sure it operates freely.

Revision Dates:

Expected Time: 10 min.