



356 SOP MAIN CABIN SPEAKERS WIRING

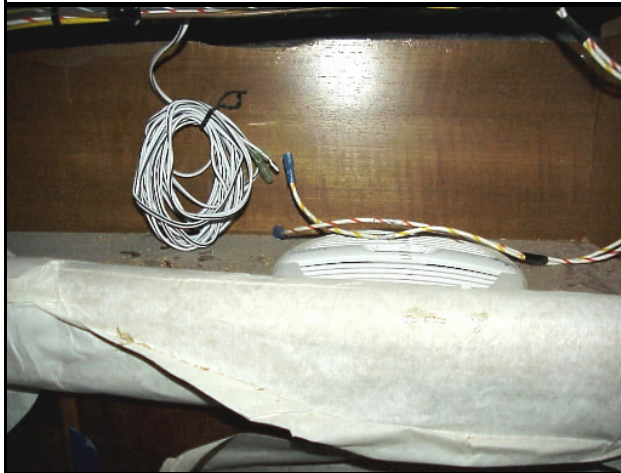


CUT OFF THE ENDS OF ALL WIRES AND EXCESS
SPEAKER WIRE GOING TO SPEAKER

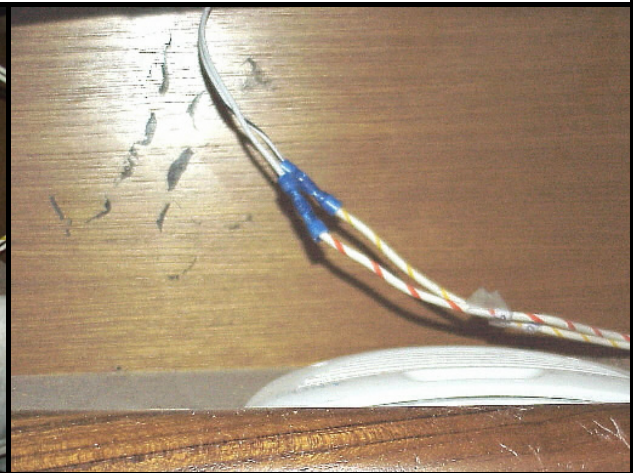

CONNECT WIRES TOGETHER WITH BLUE BUTT
CONNECTORS (PORT SIDE: WHITE/YELLOW TO
WHITE/BLACK)



TUCK WIRES BACK BEHIND HULL PANEL

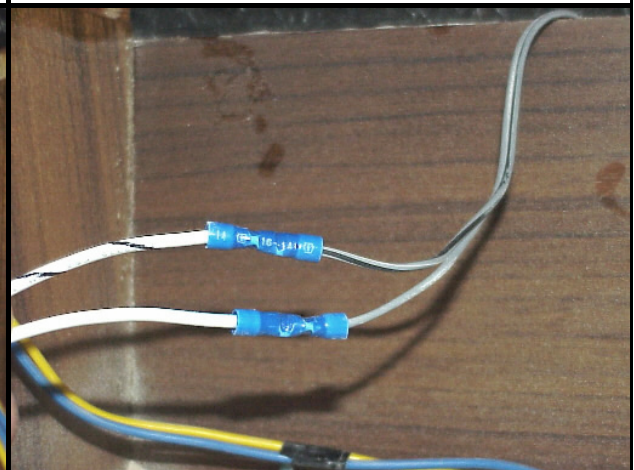

STARBOARD SIDE: WHITE/BLACK TO WHITE/BLACK
NOTICE: SOME TIMES THE WIRES TO THE SPEAKER ARE GRAY
INSTEAD OF WHITE--USE STRIPE TO IDENTIFY

#	Qty.	Description	Size	Part #
1	4	Butt Connectors (Blue)	C1614-SC	257570

1. If the boat has the stereo option than the speakers that will need to be wired will be built into the top of the cabinet on the port and starboard side of the forward end of the main cabin. Coming over the hull panel will be the wires that are connected to the speakers, coming down from the headliner harness will be the speaker wire that go to the stereo. Cut the ends off all these wires and strip the insulation back 1/2" (cut the wires that go to the speakers back far enough so they will not be an abundance of excess wire laying around after the wires have been spliced together. Using blue butt connectors connect the following wires together: Port side-- white with yellow tracer from the harness to white with black tracer from the speaker and white with orange tracer from the harness to white from the speaker. Starboard side-- white with black tracer from the harness to white with black tracer from the speaker and white with blue tracer from the harness to white from the speaker. Notice: Sometimes the wires from the speakers are gray instead of white, use the stripe to identify.
2. Place all the wires behind the hull panel.

Revision Dates:

Expected Time: