


# 356 SOP PORT AND STARBOARD SWIM PLATFORM HANDRAIL INSTALLATION

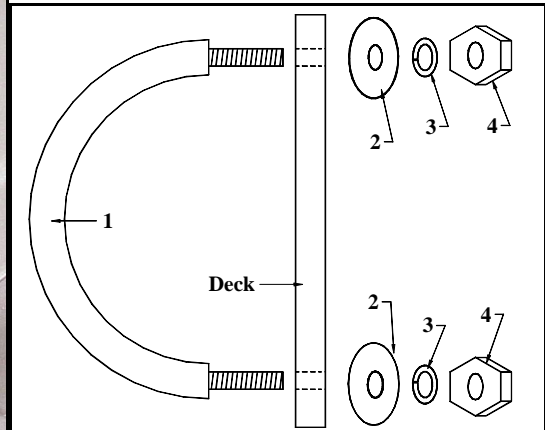

| # | #Ea. | Description              | Size       | Part # |
|---|------|--------------------------|------------|--------|
| 1 | 2    | Handrail (Swim Platform) | 356        | 307600 |
| 2 | 4    | Fender Washer            | 5/16"      | 469150 |
| 3 | 4    | Lock Washer              | 5/16"      | 469530 |
| 4 | 4    | Hex Nut                  | 5/16" - 18 | 465130 |

1. Measure and mark 3" down from the top of embossment under the swim seat and 3" outboard on both the port and starboard side of the swim platform area.
2. Drill the marked locations with a 3/8" drill bit.
3. Place one of the threaded rods on the handrail into the hole and mark the hole location for the other threaded rod directly underneath the first hole.
4. Drill the marked location with a 3/8" drill bit.
5. Dremel the edges of all the holes to expose a raw edge of glass (only edge of hole).
6. Clean the surfaces and hardware with alcohol.
7. Caulk the mounting holes with designated caulk (See page 1 #1).
8. Secure the swim seat handrails to the deck using the designated fasteners.
9. Clean up excess caulk using alcohol.

Revision Dates:

Expected Time: 10 min.