


# Hunter 49

## Lazyjack Installation

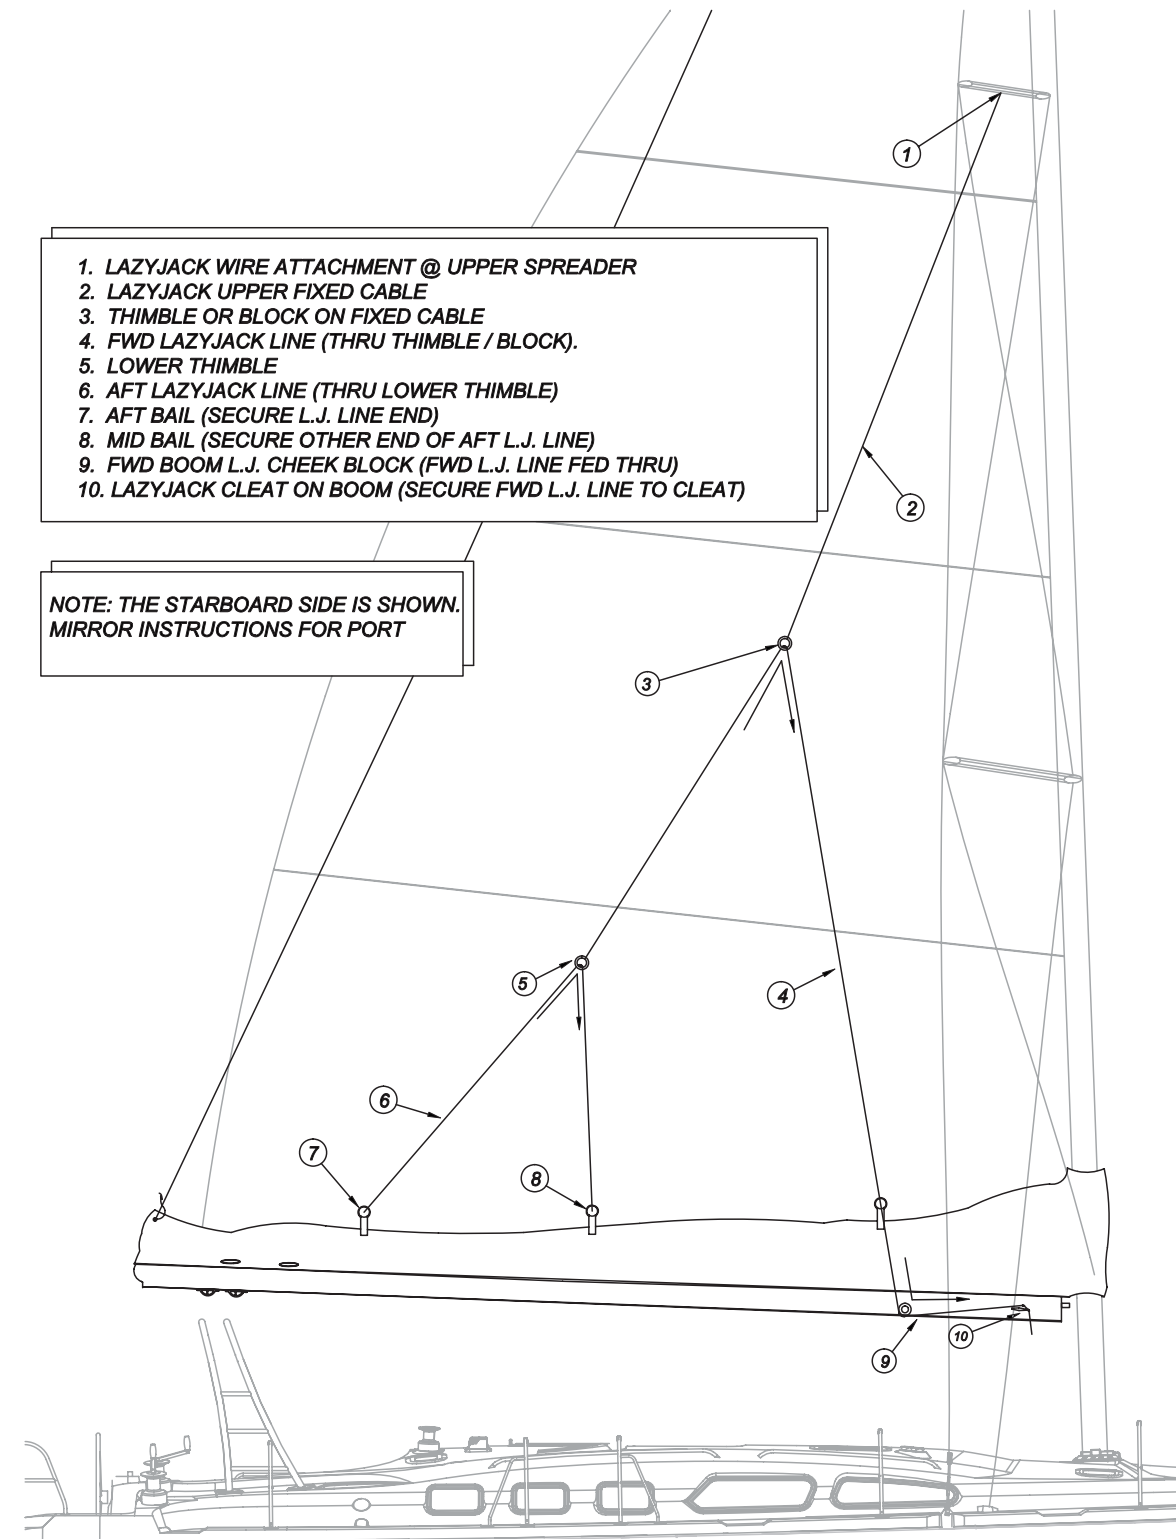

SLIDE THE BOLTROPE INTO BOOM TRACK<sup>①</sup>. START FROM THE AFT END AND MAKE YOUR WAY FORWARD.

INSTALL THE PVC BATTENS<sup>②</sup> INTO EACH HALF OF THE SAIL COVER. THERE ARE POCKETS<sup>③</sup> THAT OPEN TOWARDS THE FRONT, ON THE INSIDE OF THE COVER. SLIDE THE BATTENS INTO PLACE FROM THE FRONT, AND ROLL THE INSIDE LIP OF THE POCKET BACK IN ORDER TO HOLD THE BATTENS STATIONARY.

FEED THE LAZYJACK LINES<sup>④</sup> TO THE SAIL COVER<sup>⑤</sup> AND DEAD END THE LINES TO THE FWD AND AFT BAILS<sup>⑥</sup> ON THE SAIL COVER.

TIE THE AFT END OF THE SAIL COVER UP TO THE TOPPING LIFT LINE USING THE PIECE OF STRING PROVIDED<sup>⑦</sup>. USE HALF HITCH KNOTS TO SECURE THE COVER IN PLACE AT THE OUTER END OF THE BOOM. THE REEF LINES RUN OUT THROUGH THE COVER SLOTS<sup>⑧</sup> AND TIE OFF.

