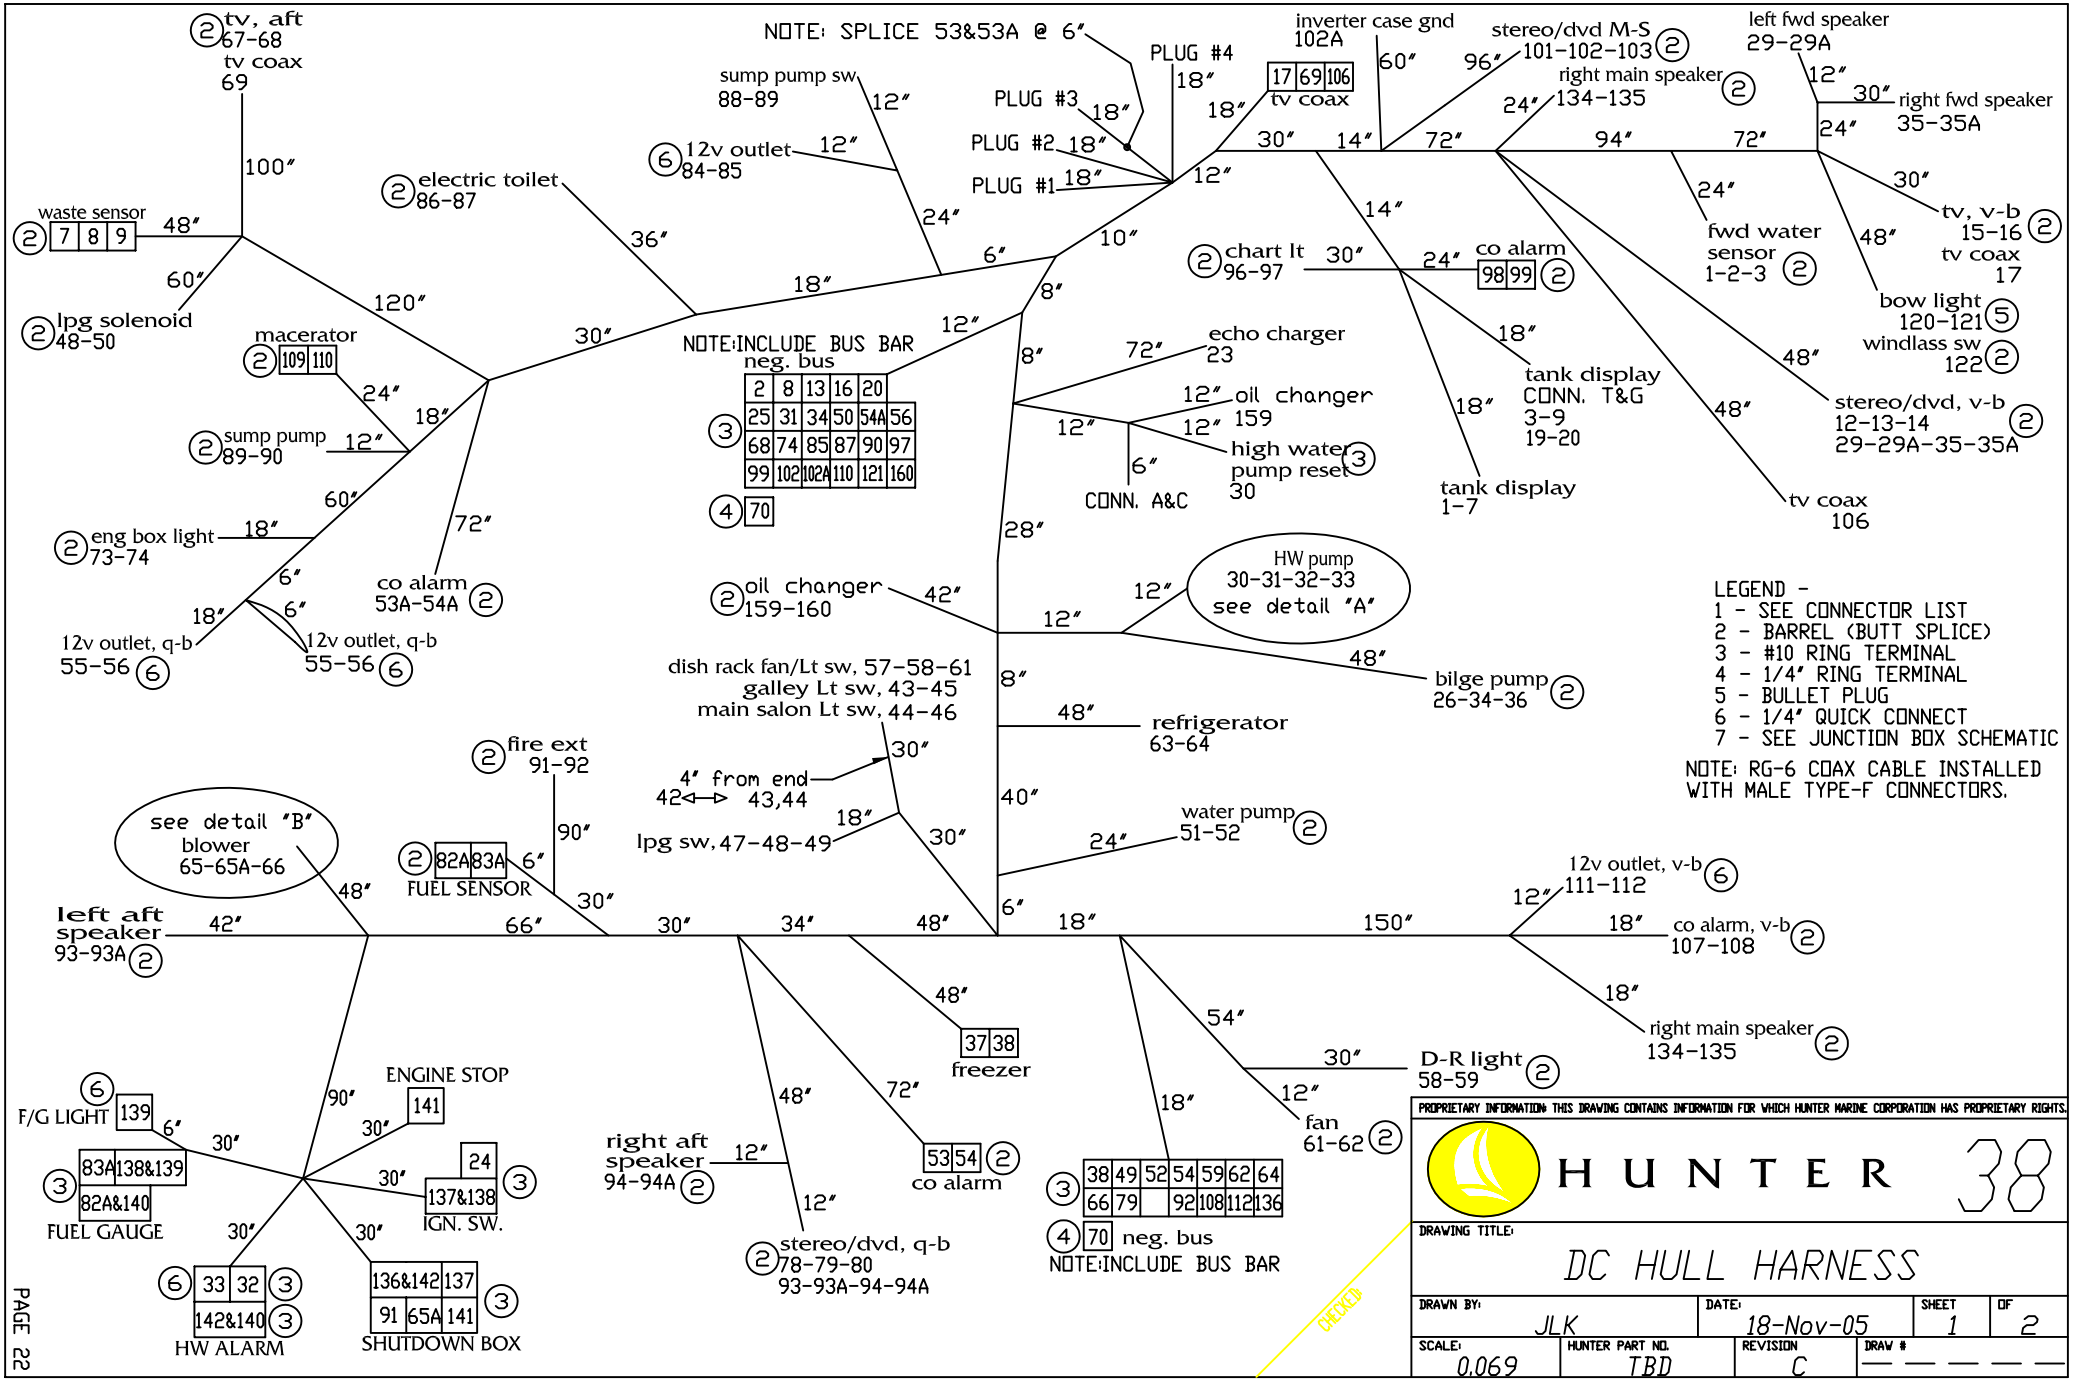

tv, aft 67-68
tv coax 69
waste sensor 7 8 9
lpg solenoid 48-50
electric toilet 86-87
sump pump sw 88-89
12v outlet 84-85
NOTE: SPLICE 53&53A @ 6"
PLUG #4
PLUG #3
PLUG #2
PLUG #1
inverter case gnd 102A
17 69 106 tv coax
stereo/dvd M-S 101-102-103
right main speaker 134-135
left fwd speaker 29-29A
right fwd speaker 35-35A
tv, v-b 15-16
tv coax 17
fwd water sensor 1-2-3
bow light 120-121
windlass sw 122
stereo/dvd, v-b 12-13-14 29-29A-35-35A
tv coax 106
chart lt 96-97
co alarm 98 99
tank display CONN. T&G 3-9 19-20
tank display 1-7
macerator 109 110
sump pump 89-90
eng box light 73-74
12v outlet, q-b 55-56
co alarm 53A-54A
NOTE:INCLUDE BUS BAR
neg. bus
2 8 13 16 20
25 31 34 50 54A 56
68 74 85 87 90 97
99 102 102A 110 121 160
70
echo charger 23
oil changer 159
high water pump reset 30
CONN. A&C
oil changer 159-160
HW pump 30-31-32-33 see detail "A"
bilge pump 26-34-36
dish rack fan/Lt sw, 57-58-61
galley Lt sw, 43-45
main salon Lt sw, 44-46
4" from end 42 43,44
lpg sw, 47-48-49
refrigerator 63-64
water pump 51-52
fire ext 91-92
82A 83A FUEL SENSOR
see detail "B" blower 65-65A-66
left aft speaker 93-93A
12v outlet, v-b 111-112
co alarm, v-b 107-108
right main speaker 134-135
D-R light 58-59
fan 61-62
37 38 freezer
53 54 co alarm
right aft speaker 94-94A
stereo/dvd, q-b 78-79-80 93-93A-94-94A
38 49 52 54 59 62 64
66 79 92 108 112 136
70 neg. bus
NOTE:INCLUDE BUS BAR
F/G LIGHT 139
83A 138&139
82A&140 FUEL GAUGE
ENGINE STOP 141
24 137&138 IGN. SW.
33 32 142&140 HW ALARM
136&142 137 91 65A 141 SHUTDOWN BOX
LEGEND -
1 - SEE CONNECTOR LIST
2 - BARREL (BUTT SPLICE)
3 - #10 RING TERMINAL
4 - 1/4" RING TERMINAL
5 - BULLET PLUG
6 - 1/4" QUICK CONNECT
7 - SEE JUNCTION BOX SCHEMATIC
NOTE: RG-6 COAX CABLE INSTALLED WITH MALE TYPE-F CONNECTORS.
PROPRIETARY INFORMATION: THIS DRAWING CONTAINS INFORMATION FOR WHICH HUNTER MARINE CORPORATION HAS PROPRIETARY RIGHTS.
HUNTER 38
DRAWING TITLE: DC HULL HARNESS
DRAWN BY: JLK
DATE: 18-Nov-05
SHEET 1 OF 2
SCALE: 0.069
HUNTER PART NO. TBD
REVISION C
DRAW #
CHECKED