



# MAKING A CONNECTION



Cut the tubing to length using the Sea Tech tubing cutter or similar. Inspect the outside diameter of the tubing. It must be free of damage, smooth, and clean.

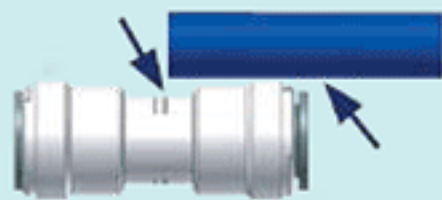


Measure the insertion depth on the tubing end. Sea Tech connectors have a insertion depth line molded onto the outside of the connector bodies.

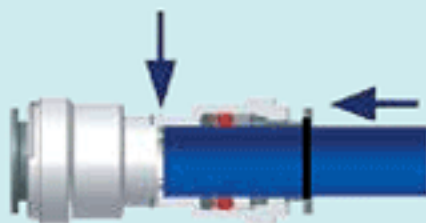

TUBE STOP

Make certain to push the tubing completely into the connector until it comes into contact with the internal tubing stop.

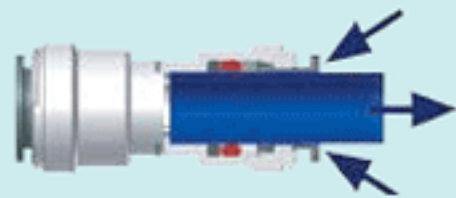

To disconnect ensure the system is depressurized before removing connectors. Push the collet in squarely against the face of the fitting. With the collet held in this position, the tubing can be removed. The connectors can then be re-used.

