



# 356 SOP READING LIGHTS INSTALLATION

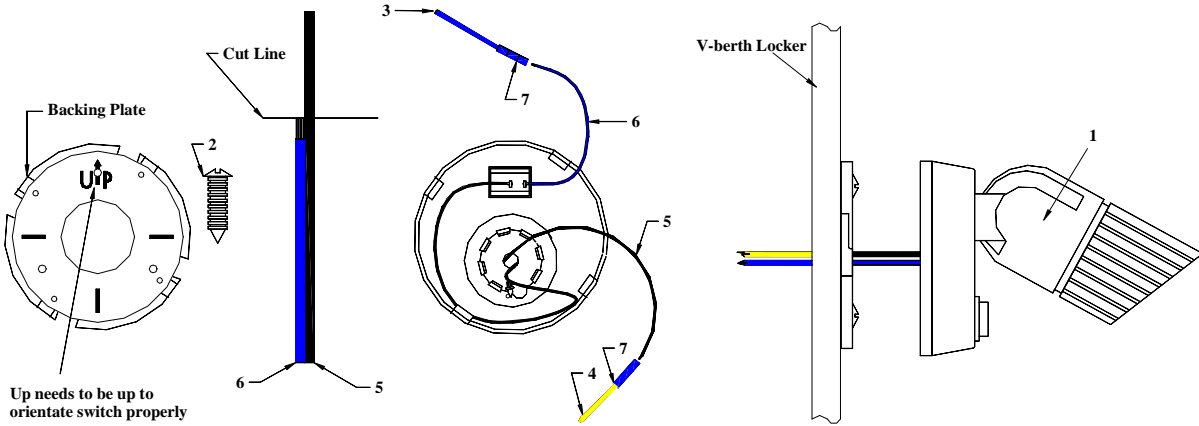

#	Qty.	Description	Size	Part #
1	2	Reading Light	Beige	255662
2	6	Reading Light Fasteners	#6 x 5/8" P/H	466870
3	2	Harness Wire (Blue)	16 Ga.	655100
4	2	Harness Wire (Yellow)	16 Ga.	659800
5	2	Reading Light Wire (Black)	N/A	N/A
6	2	Reading Light Wire (Blue)	N/A	N/A
7	4	Butt Connectors (Blue)	C1614-SC	257570

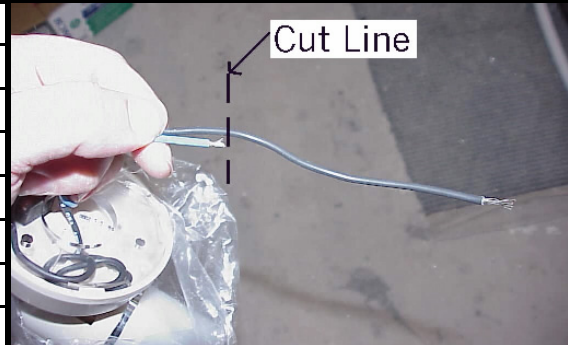

1. Cut the reading light black wire even with the blue wire.
2. Reading lights will be located on the forward face on both V-berth hanging lockers.
3. Place the backing plates in centered over the hole in the locker so the "up" on the backing plate is up (this is to orientate the switch down when installed).
4. Secure the backing plate to the furniture using the designated fasteners.
5. Pull the wires from the harness through the center hole.
6. Attach the reading light blue wire to the harness blue wire using a blue butt connector.
7. Attach the reading light black wire to the harness yellow wire using a blue butt connector.
8. Attach the reading light to the backing plate and twist to lock into place so the switch is down.

Revision Dates:

Expected Time:

Page